INSTALLATION &

OPERATION MANUAL

DDK-1700D

Fixed Indoor/Outdoor IP Dome Camera



Table of Contents

SAFETY PRECAUTIONS	4
1. DESCRIPTION	6
1.1 PHYSICAL DESCRIPTION	6
1.2 THE RESET BUTTON	8
1.3 Alarm wiring diagram	9
1.4 THE USB FUNCTION	10
2. INSTALLATION	11
2.1 HARDWARE INSTALLATION	11
2.2 DDK-1700D MINI-DOME (POE) INSTALLATION	12
2.3 PLACING A DESICCANT PACK INSIDE THE DDK-1700D	13
2.4 UPDATING SYSTEM SOFTWARE	14
3. Network Configuration	15
3.1 CABLE CONNECTIONS	15
3.1.1 DDK-1700D to Computer connection	
3.1.2 DDK-1700D to Network Switch (INTRANET)	
3.2 NETWORK SETTINGS CONFIGURATION	16
3.2.1 Enabling DHCP Function	
3.2.2 Setting an IP Address	
3.3 TCP/IP COMMUNICATION SOFTWARE	17
3.4 TCP/IP INSTALLATION	19
3.5 TCP/IP CONFIGURATION SETTING	20
3.6 CONNECTION TESTING	21

4. Operating Instructions for Software and Network Connection2	3
4.1 Web Browser	4
4.1.1 Connecting the DDK-1700D	24
4.1.2 Live Video	25
4.1.3 Setup	28
4.2 THE CMS (CENTRAL MANAGEMENT SYSTEM)74	4
4.2.1 Introduction	74
4.2.2 Installing CMS on your Computer	75
4.2.3 Login	76
4.2.4 Operation	78
5. ADVANCED OPERATION8	9
6. SPECIFICATIONS9	2
7. Client System Requirements9	4
APPENDIX 1. –How to run DDK-1700D UPnP9	5
APPENDIX 2. –Register as a DDNS member10	6

SAFETY PRECAUTIONS


Please read the following safety and operational instructions carefully to prevent harm or injury to the operator.

WARNING

- To prevent fire or shock, avoid exposing this unit to moisture.
- Do not block ventilation openings.
- Never spill liquid of any kind on the camera
- Do not attempt to service the DDK-1700D yourself. Opening the DDK-1700D's enclosure may expose the user to electrical shock. Please refer all servicing to your reseller.
- Do not use liquid cleaners or aerosols for cleaning.

1. DESCRIPTION

1.1 PHYSICAL DESCRIPTION

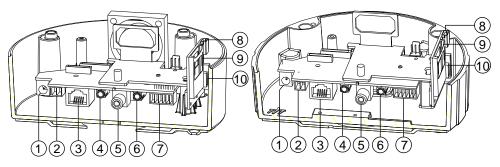

- 1. Power Input: DC 12V input connects to an external power supply.
- 2. Power Input: AC 24V input connects to an external power supply.
- ETHERNET 10/100 Connector: Standard RJ-45 connector for 10/100 Mbps Ethernet networks. PoE (Power over Ethernet) function: Provides power to the device via the same cable as used for the network connection.
- AUDIO IN: Connector is used to connect the audio output from other devices to the DDK-1700D.
- 5. VIDEO OUT Connector: Connector provides Composite video output
- 6. AUDIO OUT: Provides DDK-1700D audio signal to an external device.
- GPIO: 6-PIN connector for digital I/O, DC output and GROUND for connecting with external devices.
- 8. USB port: Connects DDK-1700D to USB port on a PC.
- 9. SD/ SDHC CARD slot: Used for updating system software and archiving video.
- 10. RESET: Reset to factory default. (Refer to section 2.4 The Reset Button.)

1.2 The Reset Button

The **Reset Button** will bring the DDK-1700D back to its factory default settings. Press the **Reset Button** for about 10 seconds. A Blue screen will be displayed and a text that says "RESETTING..." will appear. The device will then auto reboot. All settings will then be back to default. The following items will return back to default.

[SETUP]

Network Setup

- a. LAN Settings (You can manually reset this function.)
- b. PPPOE Settings (You can manually reset this function.)

Dynamic DNS

a. DYNAMIC DNS SETTING (You can manually reset this function.)

IMAGE SETUP

- a. Privacy Mask Setting
- b. IMAGE SETTINGS

AUDIO AND VIDEO

- a. VIDEO PROFILE 1
- b. VIDEO PROFILE 2
- c. VIDEO PROFILE 3
- d. AUDIO SETTINGS

MOTION DECTION

a. Video Motion setting

TIME AND DATE

- a. TIME CONFIGURATION
- b. AUTOMATIC TIME CONFIGURATION
- c. SET DATE AND TIME MANUALLY

Event Setup

- a. Server
- b. Media
- c. Event
- d. Recording

[ADVANCED]

DI and DO

- a. DI and DO
- b. LED

c. VIDEO OUTPUT

ICR

a. ICR

HTTPS


a. HTTPS

Access List

- a. Allow List
- b. Deny List

1.3 Alarm wiring diagram

DDK-1700D

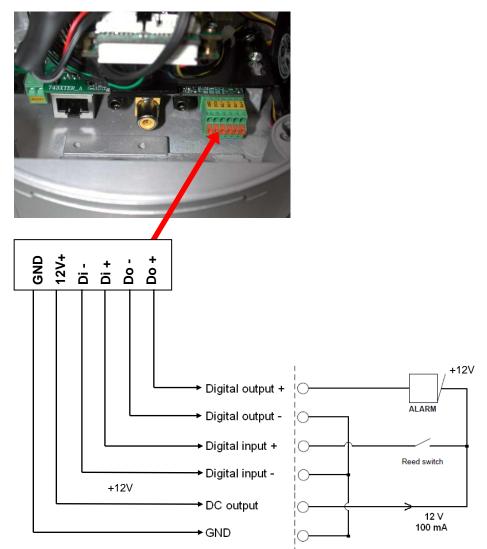

1.4 The USB function

The DDK-1700D can provide two separate functions by connecting the DDK-1700D with a PC via the USB connector

1. Using an SD card as a card reader.

Insert an SD card into the DDK-1700D and then connect to the PC. You may then transfer files between the SD card and the PC. Once you've connected your DDK-1700D to your computer Windows will detect the connection and ask you what you want to do with the SD card.

2. Using an SD card as a configuration tool.

Before using the USB configuration setting page remember to remove the SD card or the PC won't show this window.

DHCP ON

Title	ipcam(C	la:ca:ca:ca	:ca:0b)		DHCP	ON			
IP Address	192	168	0	83	- Netmask	255	255	252	0
Gateway	0	0	0	0	DNS Server	192	168	1	11
HTTP Port	80							1.5.	

DHCP OFF

Title	ipcam(0	arcarcarca	:ca:0b)		DHCP	OFF			1
IP Address	192	168	0	83	Netmask	255	255	252	0
Gateway	0	0	0	0	DNS Server	192	168	1	11
HTTP Port	80								
							Apply(A)	E	xit(<u>E</u>)

- NOTE: After changing the settings, click the "Apply" button. All changes will be effective after removing the USB connector.
- NOTE: After the IP address has been changed or reset, unplug the network cable and then plug it in again to make sure the network connection is in normal mode.

2. INSTALLATION

Follow the instructions and the diagram below to set up the system.

NOTE: The DDK-1700D's Video Out connector can be connected to a monitor via RCA connection. When connected you will see information on the monitor screen, including the DDK-1700D's factory default IP address (192.168.1.168). The DDK-1700D's IP address will only appear if there is a connection between the DDK-1700D and another device.


2.1 Hardware Installation

- 1. If using external power, connect power adapter to DDK-1700D.
- 2. Connect network cable to DDK-1700Ds RJ45 connection.
- 3. Confirm the correct network connection status.
- 4. Enter DDK-1700D's IP address into your browser.


2.2 DDK-1700D Mini-Dome (PoE) Installation

Connecting the DDK-1700D through side of base


Step 1. Attach the base to surface with the provided screws.




Step 2. Unscrew the side panel cover and remove.

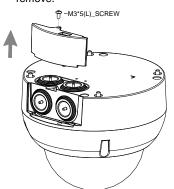


Step 3. Detach the base top from the DDK-1700D. Put the flat metal strip on the dome and attach with the included screws. Attach the base on the dome and screw in place.

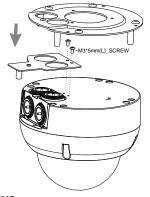


Step 4. Insert the cable in the side port.




Step 5. Attach the side panel cover. Screw cover to flat metal strip.

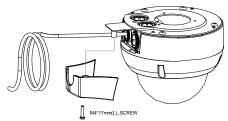



Right



Step 6. The dome is now attached to the ceiling.



DDK-1700D


2.3 Placing a Desiccant Pack Inside the DDK-1700D

The DDK-1700D comes with a desiccant pack which should be placed inside the camera using two-sided adhesive tape. The desiccant pack is for reducing the moisture and humidity inside the camera and prevents moisture from condensing on the lens or its cover.

If the user decides to remove the DDK-1700D cover after more than a few months of use, the used desiccant pack should be removed and place a replacement pack inside the camera.

- 1. Adhere the desiccant pack to the inner side of the DDK-1700D.
- 2. Use two-sided adhesive tape to attach the desiccant pack.
- 3. Reattach the cover of the DDK-1700D.

DDK-1700D:

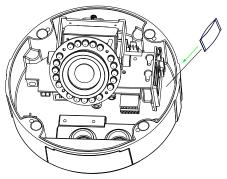

2.4 Updating System Software

If the system software of the DDK-1700D needs to be upgraded, follow these steps

Important: Before carrying out this procedure, please ensure the SD card is working and the file of the system firmware is intact

- 1. Create a directory with the name **UPGRADE** on the SD card if it does not already exist.
- 2. Copy the file UPDATE.BIN to the **UPGRADE** -directory.
- 3. Shut down DDK-1700D's power.
- 4. Insert the SD CARD into the DDK-1700D.
- 5. Remove the Ethernet cable from the RJ-45 port and then power on camera.
- 6. Within 5 to 10 seconds, a message reading "UPDATE PROCESSING" will show up on the screen in a blue background. DO NOT power off the DDK-1700D while update process is running until the message "UPDATE OK RESET PLEASE" appears on the screen. This may take 15 to 30 seconds to appear.
- 7. If the message "UPDATE NG RESET PLEASE" appears, write down the error messages shown on the screen and contact manufacturer. Power off the DDK-1700D when the update process is finished and then remove the SD card from the camera.
- 8. Reconnect the Ethernet cable to the RJ-45 port. Power ON the IP camera.
- 9. Verify the version of the system software.

WARNING:

- If the power of the DDK-1700D is suddenly lost in step 7, remove the SD card first and then power the camera on. If the DDK-1700D operates normally repeat step 3.
 Otherwise contact the manufacturer.
- If the message "CSUM ERROR" appears in step 7, there is a problem with the UPDATE.BIN file.


3. Network Configuration

3.1 Cable Connections


Physical specifications of RJ-45 cable for Ethernet

Wire Type	Cat. 5
Connector Type	RJ-45
Max. Cable Length	100 m
Hub/Switch Wiring Configuration	Straight Through
PC Wiring Configuration	Straight Through

3.1.1 DDK-1700D to Computer connection



3.1.2 DDK-1700D to Network Switch (INTRANET)

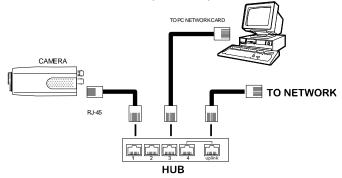

3.2 Network Settings Configuration

3.2.1 Enabling DHCP Function

The DDK-1700D's default setting is DHCP ON. An IP address can be obtained automatically from a

DHCP server. This function will only work if the LAN has a DHCP server.

3.2.2 Setting an IP Address

You need to set an IP address for the unit if DHCP is not supported on the network. Otherwise, please follow the instructions given below:

Note: The default static IP is 192.168.1.168.

Set the IP, MASK and GATEWAY settings to the following:.

IP:	192.168.1.X
MASK:	255.255.255.0
GATEWAY:	0.0.0.0

NOTE:

When a DDK-1700D is connected to a WAN, you must acquire a unique, permanent IP address and correctly configure the MASK and GATEWAY settings according to your network architecture. If you have any questions regarding those settings, please consult a qualified MIS professional or your ISP.

NOTE: When connecting to a network, each connected DDK-1700D must be assigned a unique IP address, which must be in the same class type as your network address. IP addresses are written as four sets of numbers separated by periods; for example, 192.168.1.1 Therefore, if the connected network is identified as Class C, for example, the first three sets of numbers of the DDK-1700D IP address must be the same as the network address. If the connected network is identified as Class B, the first two sets of numbers of the DDK-1700D IP address must be the same as the network address. If the connected network is identified as Class B, the first two sets of numbers of the DDK-1700D IP address must be the same as the network address. If you have any questions regarding these settings, please consult a qualified MIS professional or your ISP.


3.3 TCP/IP Communication Software

Follow the procedure below to install the TCP/IP communication program on your computer.


1. Click Start, and then click Control Panel.



2. Double click the Network Connections icon

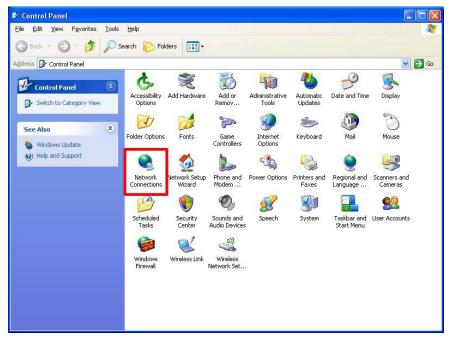

3. Right-click your network connection and then click Properties.

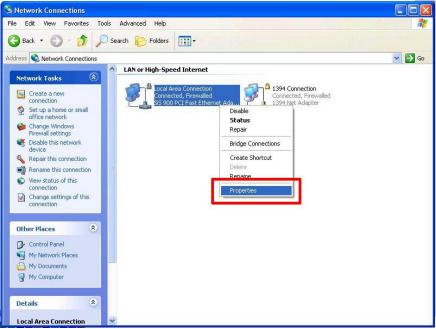

4. On the **General** tab, check if the Internet Protocol (TCP/IP) is included in the list. If the TCP/IP is included, proceed to section 3.5. If it is not included, please follow section 3.4 to install the TCP/IP.

General	Authentication	Advanced	
Connec	t using:		
S (B	iS 900 PCI Fast	Ethernet Adapter	Configure
This c <u>o</u> r	nnection uses th	ne following items:	
	Client for Micro		
	File and Printer	r Sharing for Microsof cheduler	t Networks
	Internet Protoc	CONTRACTOR OF CONT	
	×		
(li	ostall	<u>U</u> ninstall	Properties
Descr	iption		
wide	area network pr	Protocol/Internet Pro rotocol that provides onnected networks.	
Show	w icon in notifica	ation area when conr	ected
200000000		connection has limite	

3.4 TCP/IP Installation

On the **General** tab of Connection Properties, under "This connection uses the following items", click **Internet Protocol (TCP/IP)**. Then click **Install**. Select **Protocol** from the network component type then click **Add**. Select **Microsoft TCP/IP** from the network protocol then click **OK**. Click **Close** to return to the **Network Connections** window.

Local Area Connection	Properties	? 🗙	1. Select "TCP/IP."
General Authentication Adv	/anced		2. Click "Install".
Connect using:	met Adapter	figure	3. Select "Protocol"
Install	owing items: ing for Microsoft Networks (P/IP) 1. Uninstall Prop access resources on your c	Select Netwo Click the type Client Service Protoco Description A protocol	e of network component Type ? 🔀
Notify me when this conne	ection has limited or no con Select Network Proto	o col ork Protocol tha	Add 4. Cancel
4. Click "Add" 5. Select TCP/I	Network Protocol Microsoft TCP/IP ve Work Monitor Dire NWLink IPX/SPX/N	ver	tible Transport Protocol
Select TCP/I	This driver is digitally	. stan and	
5. Click "OK".	Tell me why driver si	A 1 3 3 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Have Disk
			6. OK Cancel

3.5 TCP/IP configuration setting

Click Start > Control Panel > Network Connections.

Select Internet Protocol (TCP/IP), and then click Properties.

Before completing installation to the LAN, make sure the Internet connection works properly.

	You can get IP settings assigned automatically if your network supp this capability. Otherwise, you need to ask your network administrate the appropriate IP settings.	
SiS 900 PCI Fast Ethernet Adapter	the appropriate in settings.	
his connection uses the following items:	Obtain an IP address automatically	
Elient for Microsoft Networks	O Use the following IP address:	
Image: State of the state	IP address:	
🗹 📮 QoS Packet Scheduler	Subnet mask:	
✓ 🀨 Internet Protocol (TCP/IP)	Default gateway:	
Install Uninstall Properties	Obtain DNS server address automatically	
Description	O Use the following DNS server addresses:	
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication	Preferred DNS server: 168 . 95 . 1 . 1	
across diverse interconnected networks.		
	Alternate DNS server:	
Show icon in notification area when connected Notify me when this connection has limited or no connectivity		
g rodity me when this connection has limited of his connectivity	Advanc	ed

If you are using a DHCP server, select <u>Obtain an IP address automatically</u>. Any assigned IP address for the connected DDK-1700D must be in the same class type as the server. If there is no DHCP server, please select <u>specify an IP address</u> and enter the IP address, subnet mask and default gateway of your choosing to your PC. This IP address must be different from other network IP devices but in the same class type.

3.6 Connection Testing


With the previous settings, follow the instructions below to ensure whether you have established the connection successfully.

- New Office Document 🛱 Open Office Document Set Program Access and Defaults 🐲 Windows Catalog 🍓 Windows Update 🕎 Windows Live Call Beta user Accessibility Accessories Asus ChkMail Communications Internet Internet Explorer Entertainment Asus Hotkey 🕅 Eset System Tools E-mail licrosoft Outlook 🛅 Games 🔰 Address Book IZArc Calculator Windows Messenger microsoft Office Tools Command Prompt . m SiS M650_651_650_740 Notepad m Startup 🦉 Paint Windows Update Internet Explorer Program Compatibility Wizard Remote Assistance Synchronize Tour Windows XP 🕑 Windows Media Player Tour Windows XP 3 Windows Messenger Windows Explorer Windows Movie Make 🛅 K-Lite Codec Pack Mindows Movie Maker WordPad m Skype Command Prompt 🛅 Windows Live All Programs Adobe Reader 9 0 👫 start 6 6 0
- 1. Click Start > All Programs > Command Prompt.

- Enter <u>ping XXX.XXX.XXXX</u> (the DDK-1700D's IP address), then enter. (See the sample screen below).
 - ** This is the IP address for a DDK-1700D that is assigned for the connected camera.



If you receive a response as in the screen below, the connection hasn't been successfully established. Please re-check all the hardware and software installations by repeating sections 3.4 and 3.5. If you still can't establish the connection after rechecking, please contact your dealer.

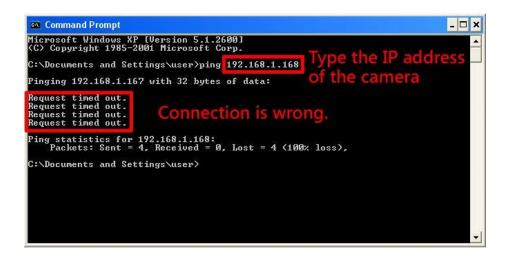

If you receive a response as in the screen below, you have successfully made the connection.

📾 Command Prompt 💶 🗖
Microsoft Windows XP [Version 5.1.2600] (C) Copyright 1985-2001 Microsoft Corp. Type the IP address
C: Vocuments and Settings (user/ping 192.168.1.168
Pinging 192.168.1.168 with 32 bytes of data: Of the camera
Reply from 192.168.1.168: bytes=32 time=1ms TTL=100 Connection is Reply from 192.168.1.168: bytes=32 time=1ms TTL=100 Connection is Reply from 192.168.1.168: bytes=32 time=1ms TTL=100 successful
Ping statistics for 192.168.1.168: Packets: Sent = 4, Received = 4, Lost = 0 (0% loss), Approximate round trip times in milli-seconds: Minimum = 0ms, Maximum = 1ms, Average = 0ms C:\Documents and Settings\user}_

4. Operating Instructions for Software and Network Connection

The DDK-1700D may be accessed through a Web Brower or through Viewer Software.

PIN NO.	PIN Assignment	– – RJ-45 socket
1.	TX +	
2.	TX -	
3.	RX +	
4.	Not Connected	12345678
5.	Not Connected	╴╎┖┓╴╺┎╯╎
6.	RX -	
7.	Not Connected	—
8.	Not Connected	_

Physical specification for Ethernet

Wire type	Cat. 5
Connector type	RJ-45
Max. cable length	100 m
Hub wiring configuration	Straight Through or Cross Over
PC wiring configuration	Straight Through or Cross Over

4.1 Web Browser


4.1.1 Connecting the DDK-1700D

- 1. Start up your Web Browser, and then follow the steps below to connect the DDK-1700D.
- 2. Click on the URL box at the top of the window.
- Enter the URL address of the DDK-1700D into the URL box and press the "Enter" key to enter the home page.
- 4. Enter the "User Name" and "Password" in the appropriate spaces.
- 5. Click on the "OK" button to set your entries.
- NOTE: The default "User Name" and "Password" are root and Admin, respectively.
- NOTE: The page headlined "Enter Network Password" is shown below. Enter the user name and password of the DDK-1700D. NOTE: Once authenticated, the login page will not appear again unless you close and reconnect.



4.1.2 Live Video

Live video from the DDK-1700D is displayed on the home page when your Camera is present in your browser. Additional settings are provided on the home page. AJAX (default) and the ActiveX viewer types display different formats on the home page.






- Click Profile-1(640x480) v to change the video resolution and quality. SD card icon:
 When a SD card is inserted, the icon becomes red .
- The Motion-on icon: When motion detection is configured the icon will appear in the right upper corner.. When motion detection is triggered the icon will blink red **4**.
- Recording Status icon: This icon appears upper right corner. When recording the icon becomes red.
- Alarm on-icon: Detects external alarms. When an alarm is triggered the icon will blink red

ActiveX viewer:

Select from the thumbnail options for taking snapshots, setting-up a Storage Folder, selecting Full Screen mode, Recording, Listening, Talking and Zooming.

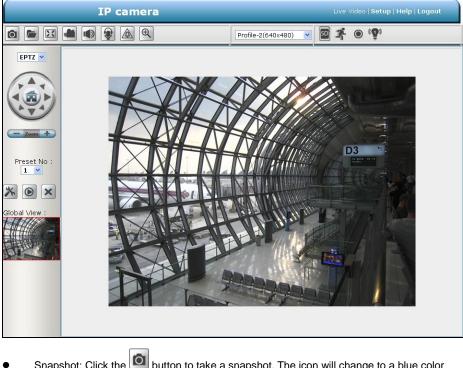

- Snapshot: Click the button to take a snapshot. The icon will change to a blue color
 when working properly.
- Set Storage Path: Click on the button to set a storage folder for saving snapshots and video clips.
- Full Screen: Click the button to enter full screen mode. The icon will change to a blue color when working properly.
- Record Button: Click the button to record a video clip. The icon will change to a blue color when working properly.
- Audio Button: Click the well button to start/stop the audio-in function (listen/stop listening).
 The icon will change to a blue color when working properly.
- Talk Button: Click the 🖤 button to start/stop audio out function (talk/stop talking). The

icon will change to a blue color 🕎 when working properly

- Digital output: Click the button to start/stop digital output. The icon will change to a blue color when working properly.
- Zoom: Click the button to bring up a popup "Zoom" window. The icon will change to a blue color when working properly. Move the scrollbar right or left to zoom in or zoom out on the Live View and the red "Active Frame" will be reduced or enlarged. You can drag the "Active Frame" to a desired position to see the detail of the live image.



 EPTZ Digital Zoom mode. This mode utilizes the megapixel resolution of the DDK-1700D to simulate the functions of a mechanical PTZ camera. When the digital zoom mode is active, the image can be zoomed in and out.

Hold down the left key of your mouse and move to the desired location in the Global View area. As the mouse moves, the live view area shows the corresponding image until the border of the image appears.

- Live Video: Click to go back to the device's homepage.
- Setup: Click to proceed to the advanced settings.
- Logout: Click to Logout.

4.1.3 Setup

Click the **Setup** button on the home page to access advanced settings.

4.1.3.1 Wizard

For quick configuration, click Wizard at the top of the Setup pages.

This wizard will guide you through a step-by-step process to configure your DDK-1700D.

ipx	DDK-1700
This wizard will guide you t	d - internet connection setup hrough a step-by-step process to configure your new Camera and connect the camera to r camera motion detection settings, please click the Back button to close this wizard and re- setup wizard.
	 Step 1: Setup LAN Settings Step 2: Setup Internet Settings Step 3: Setup DDNS Settings Step 4: Camera Name Settings Step 5: Setup Time Zone
	Back Next Cancel

Click Next to continue.

Step 1:

ip.x	DDK-1700		
Step 1: Setup LAN Settings	Internet with a DHCP connection or Static IP address. If your		
camera is connected to a router, or you are unsure wh	the Static IP address to manually assign an IP address before		
Enable DHCP			
IP address	192.168.0.168		
Subnet mask	255.255.252.0		
Default Gateway	0.0.0.0		
Primary DNS	192.168.1.11		
Back	Next Cancel		

The DDK-1700D default setting is DHCP **On**. Use DHCP protocol if DHCP is supported on your LAN. The DDK-1700D will obtain an IP address automatically from the DHCP server. Alternatively you can turn the DHCP **Off** to configure the DDK-1700D with a static IP address. The DDK-1700D's default IP is **192.168.1.168**. If your Internet Service Provider has provided connection settings, or you wish to set a static address within your network, enter the information for your static IP settings.

Click Next to continue.

Step 2:

ip.x	DDK-1700		
Step 2: Setup Internet Settings			
Please enter your ISP Username and Password in the button. Please contact your ISP if you do not know yo	e case that your ISP is using PPPoE and then click on the Next our Username and Password.		
Enable PPP	οE		
User Name			
	(e.g. 654321@hinet.net)		
Password			
Bac	(Next Cancel		

If using PPPoE, select Enable and enter user name and password. Otherwise select Disable and

click Next to continue.

Step 3:

ip.x		DDK-170	D
Step 3: Setup DDNS Settings			
If you have a Dynamic DNS account and enter in your host information be			tomatically, enable DDNS
Enable DDNS			
Server Address	www.DynDNS.org	<< www.DynDNS.org	~
Host Name]	
User Name]	
Password			
Verify Password			
Timeout	24	(hours)	
	Back	Cancel	

If using a Dynamic DNS account, select Enable and enter your host information.

Click Next to continue.

Step 4:

ip×	DDK-1700
Step 4: Camera Name Settings	3
	e your camera for easy accessibility. You can then identify and connect to your gn a name of your choice before clicking on the Next button.
IP Device Name	DDK-1700
	Back Next Cancel

Enter a name for your DDK-1700D and click **Next** to continue.

Step5:

ipx	DDK-1700
Step 5: Setup Time Zone	
Please configure the correct time to e and day and then click on the Next bi	ensure that all events are triggered, captured and scheduled at the correct time utton.
Time Zone	(GMT-05:00) Bogota, Lima, Quito, Rio Branco 🔹
Enable Daylight Saving	
	Back Next Cancel

Select a time zone to ensure that all events will be triggered, captured and scheduled at the correct

time. Click Next to continue.

Step 6:

ipx		DDK-1700
Step 6: Setup comp	olete	
	ire correct. It is reco	ngs. Click on the Back button to review or modify settings or click on the Apply mmended you note down these settings in order to access your camera on
	IP Address	192.168.0.168
	IP Device Nar	ne DDK-1700D
	Time Zone	(GMT-05:00) Bogota, Lima, Quito, Rio Branco
	DDNS	Disable
	PPPoE	Disable
		Back Apply Cancel

If DHCP is selected, a summary of the DDK-1700D's settings will be displayed. Write down all this

information as it is needed to access the camera over the network.

Click **Apply** to save settings.

4.1.3.2Change Image Settings

Follow the steps below to change the cameras video settings. A preview of the image will be shown in the Live Video window. . Click **Submit** to activate and save changes.

- <u>The Image Setup setting page</u>
- 1. Click the **Image** button to enter the image-setting page.

ipx	DDK-1700D Live Video Setup Wizard Hel			etup Wizard Help
Image	Network System	Application	Storage	Status
1	Network System IMAGE SETUP Viewer Type ○ AJAX ○ AJAX · · · · · · · · · · · · · · · · · · ·	Application	Storage	Status
	Enable OSD Timestamp Label DDK-11 Timestamp Location UPPE	700D R LEFT	maximum 63	characters
		Submit)

- 2. VIEWER TYPE. Select "AJAX" or "ActiveX" mode.
- 3. IMAGE SETTINGS. Includes "AGC", "Exposure Time", "Mirror", "Flip", "White Balance",

"Brightness", "Contrast", "Saturation" and "Sharpness".

- 4. DEVICE SETTINGS. Includes "Device Name" and "Timestamp".
 - Click "Enable OSD" and checkmark the box to activate this function.
 - Enter "Timestamp Label".
 - Enter "Timestamp Location".
- 5. Click the Submit button to submit new image settings

Functions:

Automatic gain control is abbreviated AGC. Automatic gain control is a		
feature where the amount of gain is adjusted automatically based upon the		
strength of the incoming signal. Weaker signals receive more gain;		
stronger signals receive less gain or none at all.		
Exposure time is controlled in a DDK-1700D by shutter speed and the		
illumination level by the lens aperture. This option allows the user to		
choose the exposure time of the DDK-1700D between "Auto", "1/2000",		
"1/1500", "1/1000", "1/750", "1/500", "1/250", "1/120", "1/60", "1/30", "1/15",		
"1/7.5", "1/4" and "1/2".		
Reverses image display		
To flip the DDK-1700D's image 180 degrees.		
White balance corrects unnatural color shades Select your options from		
"Auto", "Outdoor", "Indoor" and "Fluorescent".		
Setting to compensate for backlighting		
Controls color intensity/strength.		
Controls the strength of colors from black and white to bold.		
Sets clarity of detail in images.		
Click to choose location		
Click to save settings.		

The Audio and Video setting page

Click on the Audio and Video button to enter the Audio and Video settings page. Here you
may configure multiple video profiles with different settings. Click Submit to save your
changes.

ipx	DDK-1700			Live Video Setup Wizard Help	
Image	Network Sys	stem App	lication	Storage	Status
Image					
Audio and Video	VIDEO SETTINGS				
Privacy Mask	Profile number	2 🗸			
Logout	Aspect ratio				o will clear the settings
			of privacy ma	sk.	
		Save Defa	ult		
	VIDEO PROFILE 1				
	Mode	H.264 💌			
	Frame size	1440×1080			
	Viewer window area	1440×1080	~		
	Intra Frame Period	30 🗸			
	Maximum frame rate	30 🗸			
	Video quality Constant bit rate	O 2M 👻			
	Fixed quality	 Medium 	~		
	VIDEO PROFILE 2				
	Mode	JPEG 🔽			
	Frame size	640×480	~		
	Viewer window area	640x480 🛩			
	Maximum frame rate	30 💌			
	∨ideo quality	Medium 🚩			
	AUDIO SETTINGS				
		0.744			
	Encoding Audio Mechanism Settin	G.711 💌			
	Audio Mechanism Settin	9 20dB 💙			
	O Line IN	OdB 🖌			
	Enable audio out				
	Audio out volume level	10 💌			
	POWER LINE				
	💿 60 Hz i 🔘 50 Hz				
		(Submit		

- Set the "Mode", "Frame size", "Viewer window area", "Maximum frame rate" and "Video quality" of each Video Profile.
- 3. Set the details of the audio functions.

- 4. Select 50 Hz or 60Hz Power.
- 5. Click on the Submit button to save settings.

Functions:

Mode:	Choose the video format from H.264, JPEG or MPEG4 compression.	
Frame size:	Set video resolution	
Viewer window area:	Sets Live Viewer resolution	
Intra Frame Period:	Setting for compression frequency between frames	
Maximum frame rate:	Sets number of frames per second	
Video quality:	Sets video stream to constant bit rate or constant quality	
Audio Settings:	Switches microphone on/off and adjusts volume.	
Encoding:	Setting for type of audio encoding	
Audio Mechanism Setting:	: Check to activate this function and select MIC or Line In.	
Enable audio out:	Check to activate this function and set the Audio out volume level.	
Power Line	Select 50 Hz or 60Hz.	


NOTE: Audio In/Out:

Follow the steps.

- 1. Connect DDK-1700D through browser.
- 2. Ensure "Audio Mechanism Setting" & "Enable audio out" are both selected. Click Submit.
- 3. Connect Mic to the PC, and connect the DDK-1700D Audio out to the speaker.
- 4. Select "Talk" $4 \rightarrow 4$; speak to the PC-connected microphone.
- 5. Confirm audio from connected speaker.
- 6. Connect Mic to DDK-1700D--Audio in; connect speaker to PC--AUDIO Out.
- Click "Listen" in the webpage → i the Mic will send an audio signal to the DDK-1700D.
- 8. Confirm audio from PC speaker.

<u>The Privacy Mask settings page</u>

Click on the **Privacy Mask** button to enter the Privacy Mask Area setting page. Mask up to 3 privacy areas on the displayed video to specify the areas on the DDK-1700D's image to be blocked/excluded from recordings and snapshots.

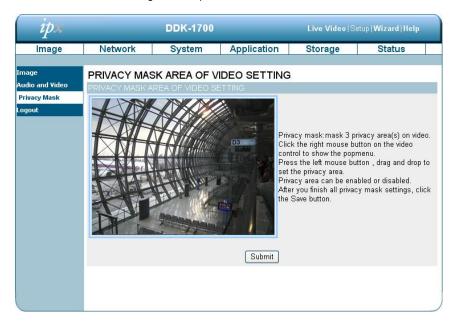

- 1. Use the right mouse button on video control to show the pop-menu.
- 2. Use the left mouse button and drag and drop to set the privacy area.
- 3. A privacy area can be enabled or disabled.
- 4. Click the Submit button.

4.1.3.3 Changing the Network Settings

Follow the steps below to change the network settings. Set network options and IP address.

1. Click on the **Network** button on the home page to enter the Network Setup page.

ipx	DDK-1700			Live Video Setup Wizard Help		
Image	Network	System	Application	Storage	Status	
Network	NETWORK SETUP					
PPPoE Port Detail Traffic	LAN SETTINGS					
Dynamic DNS HTTPS	IP addres Subnet n	nask 255.255				
Access List Logout	Default G Primary I	DNS 192.168	0.1.11			
	Enable UPnP presentation Enable UPnP port forwarding Forwarding Port 1024 Test Forwarding Status UPnP : Forwarding is inactive					
	Submit					

- The accessible network protocols are "PPPoE", "Port Detail", "Traffic", "Dynamic DNS", "HTTPS" and "Access List".
- 3. Input your network setting details. Click the **Submit** button to save settings.

Functions:

DHCP:	Enables DHCP for dynamic IP address assignment.		
DNS	(The Domain Name System) is an Internet service that		
	translates domain names into IP addresses (e.g., 192.168.0.20).		
	An address can be obtained from your ISP or network gateway.		
Enable UPnP Presentation:	Enable this setting to allow your DDK-1700D to be configured as		
	a UPnP device on your network.		
Enable UPnP port forwarding:	Enable this setting to allow the DDK-1700D to add port		
	forwarding entries into your router automatically.		

• Changing the PPPoE Network Setting.

The Network page has a PPPoE icon the upper left.. Follow the steps below to change the PPPoE setting.

1. Click the **PPPoE** button on the upper left menu to enter the "PPPoE Settings" page.

ipx	DDK-1700 Li			Live Video S	etup Wizard Help
Image	Network	System	Application	Storage	Status
Network PPPoE Port Detail Traffic Dynamic DN5 HTTP5 Access List Logout	PPPoE PPPoE SETTINGS O Enable I Dis User Nar Passwor	able	Submit		

- 2. Activate the "Enable" or "Disable" status of the PPPoE Settings.
- 3. Enter the PPPoE "Username" and the PPPoE "Password" then confirm the password again.
- 4. Click on the **Submit** button to save the setting.

NOTE: Please refer to section 4.1.3.8 (PPPoE & DDNS) for more details.

PPPoE Setting	If you use the DDK-1700D to connect directly to the Internet, you will need
	to enter the username and password which were given to you when you
	set up your account with your Internet Service Provider. If the DDK-1700D
	is behind a router or a gateway you do not need to configure this setting.
Username:	Enter Username here
Password:	Enter Password here

• Changing the Network Settings — Port Detail.

The "Network" page has a "Port Detail" icon at the upper left. This allows you to specify and reserve ports for both HTTP and RSTP streaming. Follow the steps below to change the Port Detail settings.

1. Click on the **Port Detail** button on the upper left menu to enter the "Port Detail" page.

ipx	DDK-1700D			Live Video Setup Wizard Help	
Image	Network S	ystem	Application	Storage	Status
Network PPPoE					
Port Detail Traffic Dynamic DN5 HTTPS Access List	HTTP port Access name for stream1 Access name for stream2 HTTPS	80 video1.mjpg video2.mjpg			
Logout	HTTPS port	443			
	RTSP RTSP port Access name for stream1 Access name for stream2	554 live1.sdp live2.sdp	Submit		

- 2. Enter the "HTTP port" and the "Access name for stream" for the MJPEG streams.
- 3. Enter the "HTTPS port". The default value is 443.
- Enter the "RSTP port" and the "Access name for stream" for the MJPEG or JPEG streams.
- 5. Click the **Submit** button to save the new settings.

NOTE: To use an RTSP player to access the DDK-1700D, use the following RTSP URL command to request transmission of the streaming data.

Functions

HTTP Port	HTTP ports allow you to connect to the DDK-1700D via a standard web					
	browser. This port can be set to a number other than the default HTTP port					
	80. A corresponding port must be opened on the router. For example, if the					
	port is changed to 8080, users must type in the web browser					
	'http://192.168.0.100:8080'					
	The HTTPS Port connects the DDK-1700D with a PC via a secure web					
HTTPS Port	browser.					
RTSP Port	This port number is used for RTSP streaming to mobile devices, such as					
	mobile phones or PDAs. You may specify the address of a particular					
	stream. For example, live1.sdp can be accessed at					
	rtsp://x.x.x.x/video1.sdp where the x.x.x.x represents the IP address of					
	your DDK-1700D.					

NOTE: To view the MPEG4 streaming media Players that support RTSP streaming, such as

Quick Time Player, Real Player, can be used to view the MPEG4 streaming media.

- (1) Launch the RTSP player.
- (2) Choose "File", and an "Open URL" dialog box will pop up.
- (3) Enter an Internet URL to open. The address format is rtsp://<ip address>:<rtsp port>/<RTSP streaming access name for stream1, stream2 or stream3>
- (4) The live video will be displayed in your player.

Changing the Network Settings — Network Traffic.

The "Network" page has a "Traffic" icon at the upper left. Specifying the maximum download/upload bandwidth for each socket is useful when connecting your device to a busy or heavily loaded network. Please follow the steps below to change the setting through the network.

1. Click on the Traffic button on the upper left menu to enter the "Traffic" page.

ipx	DDK-1700 Live Video Setup Wize			etup Wizard Help		
Image	Network	System	Application	Storage	Status	
Network PPPoE Port Detail Traffic Dynamic DN5 HTTP5 Access List Logout	TRAFFIC TRAFFIC Maximum Upload E Maximum Downloa *Due to TCP tra (16KB) to avoi	3andwidth: d Bandwidth: ansmission protec	0 0 tion, we have a m < up. Too few ban	Kilo Bytes Per Seco Kilo Bytes Per Seco inimal threshold i	ond ond	

- 2. Enter the "Maximum Upload Bandwidth" and the "Maximum Download Bandwidth".
- 3. Click on the **Submit** button to save the new settings.

Description of function keys:

Maximum Upload Bandwidth:	Enter in a range from 0 to 102400.
Maximum Download Bandwidth:	Enter in a range from 0 to 102400.
Submit:	Click to save settings.

• <u>Changing the Network Settings — DDNS.</u>

The DDNS (Dynamic Domain Name Server) will use a DNS host name and synchronize it with the public IP address of the router when it changes. A user name and password are required when using a DDNS service. On the "Network" page click the "DDNS" icon at the upper left of page and follow the steps below to change the DDNS settings.

1. Click on the Dynamic DNS button on the upper left menu to enter the "Dynamic DNS" page.

ipx		DDK-1700		Live Video S	etup Wizard Help	
Image	Network	System	Application	Storage	Status	
Network PPPoE Port Detail Traffic Dynamic DIIS HTTPS Access List Logout	DYNAMIC DN DYNAMIC DNS SE Enable DDNS Server Address Host Name User Name Password Verify Password Timeout Status		S.org < www.	w. DynDNS. org		
			Submit			

- 2. Check the "Enable DDNS" box to activate this function.
- Fill in the dynamic "Server Address", "Host Name", "User Name", "Password", "Verify Password", "Timeout", "IP Address" and "Email Address".
- 4. Click the **Submit** button to save the settings.

NOTE: Please refer to section 4.1.3.8 (PPPoE & DDNS) for more details.

Enable DDNS Function:	Check to activate this function.
DNS	(The Domain Name System) is an Internet service that translates domain
	names into IP addresses (i.e. 192.168.0.20). The address can be
	obtained from your ISP or network gateway.
Server Address:	Select your Dynamic DNS provider from the pull down menu or enter the
	server address manually.
Host Name:	Enter the host name of the DDNS server.
User name:	Enter your user name or e-mail used to connect to the DDNS
Password:	Enter your password used to connect to the DDNS server.
Verify Password	Enter your password again to connect to the DDNS server.
Timeout:	Enter the DNS Timeout values for registering the IP address.
Status:	Indicate the connection status, automatically determined by the system.

• Changing the Network Settings — HTTPS.

Click the "HTTPS" icon at the upper left of the "Network" page. Follow the steps below to change the

HTTPS setting.

1. Click on the HTTPS button on the upper left menu to enter the "HTTPS Setting" page.

ipx	DDK-1700			Live Video Setup Wizard Help		
Image	Network	System	Application	Storage	Status	
Network PPPoE Port Detail Traffic Dynamic DN5 HTTPS Access List Logout	HTTPS HTTPS Enable secure HTTPS connection Create certificate settings Create self-signed certificate automatically Create self-signed certificate manually Create certificate request and install Create certificate: Create					
	CERTIFICATE INF Status CSR Property	ORMATION No installed	roperty Remov	8		

- 2. Select the "Enable HTTPS secure connection" to activate this function.
- Click to select the "Create certificate method" from "Create self-signed certificate automatically", "Create self-signed certificate manually" and "Create certificate request and install".
- 4. Click "Create" to save the create certificate settings.
- 5. The Certification Information will show below.
- 6. Click "CSR Property" to see the Certificate Signing Request information.
- 7. Click "Certificate Property" to see the Certificate information.
- 8. Click "Remove" to remove the created certificate.
- 9. Click on the Submit button to submit the new setting.

NOTE: The certificate cannot be removed while the HTTPS is still enabled. To remove the certificate you must first uncheck Enable HTTPS secure connection.

Methods of creating and installing certificates:

1. Create self-signed certificate automatically

- (1) Enable HTTPS secure connection.
- (2) Select the "Create self-signed certificate automatically" option.
- (3) Click the Create button.
- (4) The new Certification Information will show in the third column on the HTTPS setting page.
- (5) Click Home to return to the main page. Change the address from "http://" to "https://" in the address bar and press Enter on your keyboard. Some Security Alert dialogs will pop up. Click OK or Yes to enable HTTPS.

2. Create self-signed certificate manually

- (1) Enable HTTPS secure connection.
- (2) Click "Create self-signed certificate manually" to open the Create certificate column.
- (3) Click the Create button.
- (4) The new Certification Information will show in the third column on the HTTPS setting page.

3. Create certificate request and install

- (1) Enable HTTPS secure connection.
- (2) Click "Create self-signed certificate automatically" to open the Create certificate column.
- (3) Click the Create button.
- (4) If you see an Information bar, click OK and click on the Information bar at the top of the page to allow pop-ups.
- (5) The pop-up windows will show a certificate request.
- (6) Look for a trusted certificate authority that issues digital certificates. Enroll the DDK-1700D. Wait for the certificate authority to issue a SSL certificate; click "Browse..." to search for the issued certificate and then click "Upload" on the Create certificate column.
- (7) The new Certification Information will show in the third column on the HTTPS setting page.

• Changing the Network Settings — Access List.

On the "Network" page at the upper left is the "Access List" icon. Follow the steps below to change the Access List settings.

1. Click on the Access List button on the upper left menu to enter the "Access List" page.

ipx		DDK-1700		Live Video S	etup Wizard Help
Image	Network	System	Application	Storage	Status
Network PPPoE Port Detail Traffic Dynamic DNS HTTPS	ACCESS LIST ALLOW LIST Start IP address End IP address Delete allow list			Add Delete	
Access List	DENY LIST				
Logout	Start IP address End IP address Delete deny list	•		Add Delete	

- Enter the "Start IP address", "End IP address" and "Delete allow list" details in the "Allow List" area.
 Select "Add" to add or "Delete" to delete entries.
- Enter the "Start IP address", "End IP address" and "Delete deny list" details in the "Deny List" area.
 Select "Add" to add or "Delete" to delete entries.
- 4. Click the **Submit** button to submit new settings.

Allow List:	
Start IP Address	The starting IP Address of the devices (such as a computer) which have permission to access the DDK-1700D.
End IP Address	The ending IP Address of the devices (such as a computer) which have permission to access the DDK-1700D.
Delete Allow List	Removes the customized settings from the Permission List.
Deny List:	
Start IP Address	The starting IP Address of the devices (such as a computer) which don't

	have permission to access the DDK-1700D.
End IP Address	The ending IP Address of the devices (such as a computer) which don't
	have permission to access the DDK-1700D.
Delete Deny List	Removes the customized settings from the Permission List.

NOTE: If there are conflicts between the range of the Allow List and the range of the Deny List,

the Access List within the range of the Deny List has the higher priority over the range of the Allow List.

4.1.3.4 Changing the System Settings

Follow the steps below to change the system date and time settings. t

- <u>Setting the Time and Date of the system</u>
- 1. Click on the System button to enter the "Time and Date" page (default). In this area you may

automatically or manually configure, update, and maintain the internal system clock of the DDK-1700D.

ipx	DDK-1700			Live Video (S	etup Wizard Help			
Image	Network	System	Application	Storage	Status			
Time and Date	TIME AND DA	TE						
DI and DO	TIME CONFIGURA	TION						
ICR	Time Zone (GMT	-05:00) Bogota, Lima	a, Quito, Rio Branco		~			
User	Time Format DD/N	1М/ҮҮҮҮ 🔽						
Maintenance	and the second	Enable Daylight Saving						
Upgrade Firmware	Auto Dayl							
Logout		nd time manually						
	Offset	+2:00	~					
	Month Week Day of week Hour Minutes							
	Start tin	ie 5 ⊻	1 🔽 Sunday 💌	0 00				
	End tim	e 10 ~	1 🗸 Sunday 🖌	0 00				
	AUTOMATIC TIME	CONFIGURATION	J.					
	🔲 Synchronize w	th NTP Server						
	NTP Server	pool.ntp.org						
	SET DATE AND T	IME MANUALLY						
	🔲 Set date and ti	me manually						
	Copy You	r Computer's Time Si	ettings					
	Year 2011 🔽	Month 5 🔽 Da	y 23 😪					
	Hour 1 Minute 1 Second 14							
			Submit					

- To set the Time Configuration select a time zone from the drop-down menu. Select Enable Daylight Saving Time if required. Then select "Auto Daylight Saving" or "Set date and time manually".
- 3. To set the Automatic Time Configuration select "Synchronize with NTP Server" and enter the address of the NTP Server.
- 4. To set the Date and Time manually select "Set date and time manually" and then select "Copy Your Computer's Time Settings" or manually set the date and time from the drop-down menus.
- 5. Click the **Submit** button to save the Date and Time settings.

Time Zone:	Select time zone from the drop-down menu.
Enable Daylight Saving:	Select to enable daylight saving time.
Auto Daylight Saving:	Select this option to configure Daylight Saving setting
	automatically.
Set date and time manually:	Select this option to configure Daylight Saving date and
	time manually.
Offset:	Sets the amount of time to be added or removed when
	Daylight Saving is enabled.
Synchronize with NTP server:	Enable this feature to obtain time configuration
	automatically from the NTP server.
NTP Server:	The Network Time Protocol (NTP) synchronizes the device
	with an Internet time server. Choose one close to your
	location.
Set the date and time manually:	Allows for setting time and date manually.
Copy Your Computer's Time Settings:	Will synchronize time information from Computer.

<u>Changing the System Settings — Digital Input & Output.</u>

1. Click on the **DI and DO** button on the left side of the "System" page to enter the "DI and DO" page.

ipx		D	DK-1700		Live Video Se	etup Wizard Help	
Image	Network		System	Application	Storage	Status	
Time and Date	DI AND DO						
DI and DO	DI AND DO						
ICR	Digital Input 1: T	he active	state is N.O.	💌 ; the current stat	te detected is Open		
User	Digital Output 1:		Contraction of the second		•		
Maintenance	LED		L				
Upgrade Firmware	LED	⊙ On	OOff				
Logout	VIDEO OUTPUT		0.01				
	VIDEO OUTPUT		OOff				
	OSD OUTPUT		OOff				
		001	001				
				Submit			

- 2. Select the active state of the Digital Input 1 from the drop-down list.
- 3. Select the active state of the Digital Output 1 from the drop-down list.
- 4. Click to set the LED "On" or "Off'.
- 5. Click the Submit button to submit the new user's settings.

Digital Input:	Select "N.O." or "N.C." as the active state of the Digital Input, in order to
	use the GPIO connector function.
Digital Output:	Select "N.O." or "N.C." as the active state of the Digital Output, in order to
	use the GPIO connector function.
LED	Select "ON" or "OFF" to turn this function on and off.

• <u>Changing the System Settings — ICR.</u>

Follow the steps below to change the IR cut function settings.

1. Click on the ICR button on the left side of the "System" page to enter the "ICR" page.

ipx		DDK-1700		Live Video S	etup Wizard Help
Image	Network	System	Application	Storage	Status
Time and Date	ICR				
DI and DO ICR User	ICR IR _ Cut Removable	filters triggering con	dition:		
Maintenance Upgrade Firmware Logout	 Day mode Night mode Schedule mode 	Day mode(24hr) From 07 💉 00 👔	To 18 💌 00 🛩		
	IR LIGHT IR LIGHT O Off O On O Sync. With ICR O Schedule	IR Light On(24hr) From 07 00 00	To 18 🖤 00 💌		
			Submit		

- Select option for "IR-Cut Removable filter trigger condition": "Automatic", "Day Mode", "Night Mode" or "Schedule".
- 3. Select IR light power "Off", "On", "Sync, with ICR" or "Schedule".
- 4. Click the **Submit** button to save the new settings.

Automatic	Day/Night mode will change automatically depending on lighting					
	conditions.					
Day mode	Day mode disables the IR Cut Filter.					
Night mode	Night mode enables the IR Cut Filter.					
Schedule mode	Sets the Day/Night mode using a schedule. Starting time begins Day					
	mode end time returns to the Night mode.					

• <u>Changing the System Settings — Users.</u>

1. Click the **Users** button on the left side of the "System" page to enter the "Users" page.

ipx		DDK-1700		Live Video S	etup Wizard Help
Image	Network	System	Application	Storage	Status
Time and Date DI and DO ICR User Maintenance Upgrade Firmware Logout	USER USER LIST root:Admin	D	elete User		
	ADD/MODIFY USE User Name : Password: Confirm: Authority:) Operator () Viewer Add/Modify User		

- 2. Add, modify or delete a user's data.
- 3. Click Add/ Modify User button to save new user settings.
- 4. Click the **Home** button to return to the home page.

User List:	The list shows the registered user(s) and their corresponding authority.
Delete:	Deletes a selected user.
Name:	Enter user's name To be added
Password:	Enter the new password for the user's name.
Confirm:	Enter the password again for verification.
Authority:	Choose user authority: Admin, Operator, and Viewer.
Add/ Modify User:	Click to save new settings.

• Changing the System Settings — Maintenance.

Click the Maintenance button on the left side of the "Date and Time" page to enter "Maintenance" page.

ipx		DDK-1700	Live Video Setup Wizard Help			
Image	Network	System	Application	Storage	Status	
Time and Date DI and DO ICR User Maintenance Upgrade Firmware Logout	MAINTENANC SYSTEM Save To Local Hard Load From Local H Restore To Factory	CE Drive ard Drive Default	cept settings in	Save Configuration	Browse)	

Save Configuration:	Click "Save Configuration" to save the configuration files to local hard
	drive.
Load Configuration:	Browse and click on "Load Configuration" to load configuration files to
	the local hard drive.
Restore Factory Defaults:	Click "Restore Factory Defaults" to restore factory defaults. You may
	browse and load saved configuration files to restore saved settings
Reboot Device:	Click "Reboot Device" to reboot the device. This option will restart the
	DDK-1700D.

<u>Changing the System Settings — Update Firmware.</u>

 Click the Firmware Upgrade button on left side of "Date and Time" page to enter the "Firmware Upgrade" page.

ipx		DDK-1700	Live Video S	etup Wizard Help	
Image	Network	System	Application	Storage	Status
Time and Date		RMWARE			
DI and DO	FIRMWARE INFO	RMATION			
ICR User	Current Firmware V Current Product Na		-1700		
Maintenance	UPGRADE FIRMM	/ARE			
Upgrade Firmware Logout	File Path:	B	rowseUpload		

- 2. Click the "Browse..." button to find and select the UPDATE.BIN file which was saved to computer
- 3. Click the "Upload" button.

NOTE: DO NOT power off DDK-1700D while updating firmware.

NOTE: Don't interrupt the process while the unit is updating.

NOTE: Updating with the wrong UPDATE.BIN file may cause physical damage to the device.

NOTE: The Temporary Internet Files (or cache) folder contains Web page content that is stored in your hard disk for quick viewing. We suggest deleting the Temporary Internet Files immediately after updating firmware.

4.1.3.5 Changing the Application Settings

- <u>Changing the Application Settings Language Setting.</u>
- 1. Click on the Language button on the left side to enter the "Language Setting" page.


ipx		DDK-1700		Live Video S	etup Wizard Help
Image	Network	System	Application	Storage	Status
Language Motion Detection Event Logout	LANGUAGE S LANGUAGE SETT Language:		ish) 💌		
			Submit		

2. Select language and click "Submit" to save.

• <u>Changing the Application Settings — Motion Detection.</u>

Setting motion detection:

1. Click the **Motion Detection** button on the left side of the Applications page to enter the "Motion Detection" page.

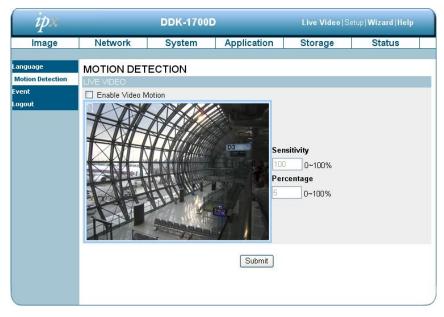

- 2. Drag the mouse across a targeted zone to draw a rectangle on the image. NOTE: You can set more than one targeted zone.
- 3. Enable / disable the motion detection function.
- 4. Click the **Submit** button to save the settings.

• Changing the Application Settings — Event.

Click the Event bottom at left of Application page and then click on "Add" to enter the setting pages for the Server, Media, Event and Recording settings. Click "Delete" to erase settings.

ipx	DDK-1700			DDK-1700 Live Video Setup Wizard Help		
Image	Network	System	Application	Storage	Status	
Language Motion Detection Event Logout	Add C Delet	Address/Locat e Mon Tue Wed Thu e Mon Tue Wed Thu	ion u Fri Sat Time Trig u Fri Sat Time Sou			

The Event Setup page has 4 sections: Server, Media, Event, and Recording.

- 1. To add a new setting click add under EVENT, SERVER, or MEDIA
- 2. To delete a setting from a drop-down click Delete.
- 3. Click on a setting name to enter a window to modify.

NOTE: You can add up to five servers, five media fields, three event schedules, and two recording schedules.

Server:

Click the **Add** button in the Server area to enter the "Server" settings page.

ipx		DDK-1700		Live Video S	letup Wizard Help
Image	Network	System	Application	Storage	Status
Language Motion Detection	SERVER SERVER TYPE				
Event	Server Name:				
Logout	💿 Email		6		
	Sender	email address			
	Recipier	t email address			
	Server a	ddress			
	User na	ne			
	Passwo	d			
	Port		25		
		server requires a se	cure connection (St	artTLS)	
	O FTP				
	Server a	ddress			
	Port		21		
	User nai				
	Passwo				
		folder name sive mode			
	Network storage				
	and the second second second	storage location			
		nple:\\my_nas\disk\	folder)		
	Workgro	up			
	User na	ne			
	Passwo	d			
		WINS server			
	O SD Card				
		Tes	t] Submit Don	't Submit	

- Enter the unique Server name. There are four types of servers supported: email server, FTP server, HTTP server and network storage.
- Set Email the details. "Sender email address", the email address of the sender. "Recipient email address", the email address of the recipient.
- 3. Set FTP details. "Remote folder name": Must be an authorized folder on the external FTP server. The string must conform to that of the external FTP server. Some FTP servers cannot accept a preceding slash symbol before the path without virtual path mapping. Refer to the instructions for the external FTP server for details. The folder privilege must be open

for uploading. "Passive Mode": Set details for Network storage. Only one network storage device is supported. "Network storage location" is the path to upload the media. "Workgroup" is the workgroup for network storage.

- 4. Click on SD card to activate this function. The SD card is used for recording video data.
- 5. Click "Submit" to save or click on "Don't Submit" to go back to the Event main page.

Server settings:

Click Add in the Sever area on the Event Settings page to open the Server setting page.
 On this page, you can specify where a notification has been sent when a trigger is activated. A total of 5 server settings can be configured.

NOTE: The maximum number of server settings is five. Network storage or SD card can only be set for one.

- (2) Enter the Server Name for the server setting.
- (3) Select the Server Type. There are four choices of server types available: Email, FTP, Network storage and SD card. Select the server types.
 - Email: Select to send media files via email when a trigger is activated.
 - (a) Sender email address: Enter the email address of the sender.
 - (b) Recipient email address: Enter the email address of the recipient.
 - (c) Server address: Enter the domain or IP address of the email server.
 - (d) User name: Enter the user name of the email account.
 - (e) Password: Enter the password of the email account.
 - (f) Port: The default email server port is 25. You can also manually set different port.
 - (g) To verify if the email setting is correctly configured click the Test button. The result will be shown above the setting page (TEST OK or TEST ERROR). If successful, you will receive an email indicating the result.
 - (h) Click Submit to activate the setting.

- FTP: Select to send media files to an FTP server when a trigger is activated.
- (a) Server address: Enter the domain or IP address of the FTP server.
- (b) Port: The default FTP server port is 21. It can also be assigned a different port number.
- (c) User name: Enter the login name of the FTP account.
- (d) Password: Enter the password of the FTP account.
- (e) Remote folder name: Enter the folder name where the media file will be sent. If the folder name does not exit the DDK-1700D will create one on the FTP server.
- (f) Passive mode: Most firewalls do not accept new connections initiated from external requests. If the FTP server supports passive mode, select this option to enable passive mode FTP and allow data transmission to pass through the firewall.
- (g) To verify if the FTP setting is correctly configured, click the Test button. The result will be shown above the setting page (TEST OK or TEST ERROR).
- (h) Click Submit to activate the setting.

Network storage: Select to send media files to a network storage location when a trigger is activated.

- Network storage location: Enter the network storage path (\\ server name or IP address\ folder name).
- (b) Workgroup: Enter the workgroup name for the network storage server.
- (c) User name: Enter the user name for the server.
- (d) Password: Enter the password for the server.
- (e) Primary WINS server:
- (f) To verify if the storage setting is correctly configured, click the Test button. The result will be shown above the setting page (TEST OK or TEST ERROR).
- (g) Click Submit to activate the setting.

- **SD card:** Select to send media files to an SD card when a trigger is activated.
 - (a) Insert SD card.

.

- (b) To verify if the storage setting is correctly configured click the Test button. The result will be shown above the setting page (TEST OK or TEST ERROR).
- (c) Click Submit to activate the setting.
- (4) When completed, click Submit to enable the settings and exit the page. The new server settings will appear in the Event Settings page.

NOTE: To remove a server setting from the list (Application> Event>), select a server name from the drop-down list and click Delete.

Note that only when the server setting is not being applied to an event setting (Application> Event> Event> The "Action" option) can it be deleted or the DDK-1700D won't take any action when a trigger is activated.

Media:

Click the **Add** button in the Media area to enter the "Media" settings page.

ipx		DDK-1700		Live Video S	etup Wizard Help
Image	Network	System	Application	Storage	Status
Language Motion Detection Event Logout	MEDIA MEDIA TYPE Media name: Source: Profile Send 1 Send 1 File Name Prefix Add date ar Video Clip Source: Profile Pre-event record Maximum durati Maximum file si File Name Prefix System log	pre-event image(s) post-event image(c: d time suffix to file r ing: sec sec ze: Kbyt	s) [0~7]	mit	

- Enter the unique Media name. There are three types of supported media: snapshot, video clip and system log.
- 2. Set details of the Snapshot.

"Source": Select the video source.

"Send Pre-event images": The number of pre-event images.

"Send Post-event images": The number of post-event images.

"File name prefix": The prefix name will be added on the file name of the snapshot images.

"Add date and time suffix to file name": Check to add time information as file name

suffix.

3. Set details of Video Clip.

"Source": Select the video source.

"Pre-event recording": The interval of pre-event recording in seconds. There are two limitations for video clip file:

"Maximum duration": The maximum recording file duration in seconds.

"Maximum file size": The maximum file size would be generated.

- 4. Click on the System log to activate this function.
- 5. Click on "Submit" to save, or click on "Don't Submit" to go back to the Event main page.

Media settings:

- (1) Click Add in the Media area of the Event Settings page to open. On this page, you can specify the type of media that will be sent when a trigger is activated. A total of 5 media settings can be configured.
- (2) Enter the Media Name for the media setting.
- (3) Select the Media Type. There are three choices of media types available: Snapshot, Video Clip and System log.

Snapshot:

- (a) Source: Select to take snapshots from the video profile.
- (b) Send pre-event image(s) [0~4]: The DDK-1700D has a buffer area; it temporarily holds data up to a certain limit. Enter the number of how many images to be captured before a trigger is activated. Up to 4 images can be generated.
- (c) Send post-event image(s) [0~7]: Enter the number of how many images to capture after a trigger is activated. Up to 7 images can be generated.

NOTE: For example, if both the Send pre-event images and Send post-event images are set to 4, a total of 8 images are generated after a trigger is activated.

(d) File Name Prefix: Enter the text that will be appended to the front of the file name. For example, the file name will be in this form:




The format is: YYYYMMDD_HHMMSS

- (e) Add date and time suffix to file name: Select the option to add date/ time suffix to the file name.
- (f) Click Submit to save the setting.

Video Clip: Select to send video clips when a trigger is activated.

- (a) Source: Select to record video clips from a video profile.
- (b) Pre-event recording: The DDK-1700D has a memory buffer that temporarily holds data. Enter the number of seconds of recording to be saved before a trigger is activated. There is a 4 second maximum setting.
- (c) Maximum duration: Enter the maximum recording duration in seconds. Up to 100 seconds can be set.

Example: If pre-event recording is set to 4 seconds and the maximum duration is set to 10 seconds, the DDK-1700D continues to record for another 5 seconds after a trigger is activated.



- (d) Maximum file size: Specify the maximum file size..
- (e) File Name Prefix: Enter the text that will be appended to the front of the file name.
- (f) Click Submit to save the setting.

- System log: Select to send a system log when a trigger is activated. Click Submit to activate the setting.
- (4) Click Submit to enable the settings and exit the page. The new media settings will appear on the Event Settings page.
- NOTE: To remove a media setting from the list (Application> Event>), select a media name from the drop-down list and click Delete. Note that only when the media setting is not being applied to an event setting (Application> Event> Event> The "Attached media" item) can it be deleted or you can't get the images/ logs when a trigger is activated.

Event:

Click the **Add** button in the Event area to enter the "Event" settings page.

ipx	DDK-1700			Live Video Setup Wizard Help			
Image	Network	System	Application	Storage	Status		
Language Motion Detection	EVENT				_		
Event Logout	Event name: Enable this event Priority: normal v Delay for 10 seconds before detecting next event [For motion detection and digital input]						
	TRIGGER Video motion detection Periodic Trigger every 1 minutes Digital input System boot Network Lose EVENT SCHEDULE						
	Sun Mon V Tue V Wed V Thu V Fri V Sat Time Always From 0 V 00 V To 23 V 59 V ACTION Trigger D/O for 1 seconds Submit Don't Submit						

 Enter an Event name. Check the "Enable this event" box to activate this function. Then set the Priority and the Source from the drop-down list.

"Priority": The event with higher priority will be executed first.

2. Select the event trigger mode.

"Video motion detection": Motion triggered events.

"Periodic": An event is triggered in specified intervals. The unit of trigger interval is 1

minute.

"Digital input": An event is triggered when the DI status is changed by an external device.

"System boot": An event is triggered when the system boots up.

- 3. Set the recording schedule time.
- 4. Sets the D/O Event Trigger. Check to trigger digital output for number of specified seconds

when an event is triggered.

5. Click "Submit" to save or click on "Don't Submit" to go back to the Event main page.

Event settings:

- (1) Click Add in the Event area on Event Settings page to open the Event setting page. On this page, you can configure three settings: Trigger, Event Schedule, and Action to set an event. A total of 3 different event settings can be configured.
- (2) Enter the Event Name for the event setting.
- (3) Select "Enable this event" option to enable the event setting.
- (4) Set the event priority from: "normal", "high" and "highest". Events with a higher priority will be executed first.
- (5) Enter the duration in seconds to restart motion detection after a motion is detected
- (6) An event is the action initiated by the user-defined trigger source. Set the event details for each as follows.
 - **Trigger:** This option defines when to trigger the DDK-1700D. The trigger source can be configured to use the DDK-1700D's built-in motion detection , periodic, external digital input devices, or system boot:
 - (a) Video motion detection: This option makes use of the built-in motion detection mechanism as a trigger source. To enable this function, you need to first configure a motion detection windows.
 - (b) Periodic: This option allows the DDK-1700D to trigger periodically as defined in minute intervals up to 99999 minutes.
 - (c) Digital input: This option allows the DDK-1700D to use an external digital input device or sensor as a trigger source.
 - (d) System boot: This option triggers the DDK-1700D when the power to the DDK-1700D is disconnected.
 - **Event Schedule:** Specify the period for the event.
 - (a) Select the days of the week.

(b) Set the recording schedule in the 24-hour time format.

•

- Action: Define the actions to be performed by the DDK-1700D when a trigger is activated.
- (a) Trigger D/O for ~ seconds: Select this option to turn on the external digital output device when a trigger is activated. Specify the length of the trigger interval in the text box.
- (b) For setting an event with recorded video or snapshots it is necessary to configure the server and media settings first so that the DDK-1700D will know what action to take when a trigger is activated.
 Check a Server Name and then select the Attached media (the media name) from the drop-down list.
- (7) Click Submit to enable the settings to exit this page. The new event settings will appear on the Event Settings page.

NOTE: The new event settings / server settings / media settings will appear in the event drop-down list on the "Application> Event>" page.

Recording:

Click the **Add** button in the Recording area to enter the "Recording" settings page.

ipx	DDK-1700			Live Video S	etup Wizard Help			
Image	Network	System	Application	Storage	Status			
Language Motion Detection								
Event Logout	Recording entry n	ame:						
	 □ Enable this recording Priority: normal ♥ Source: Profile 1 ♥ RECORDING SCHEDULE ♥ Sun ♥ Mon ♥ Tue ♥ Wed ♥ Thu ♥ Fri ♥ Sat Time 							
	 O From 00 ♥ 00 ♥ To 23 ♥ 59 ♥ 							
	RECORDING SET Destination None Total cycling record Size of each file for File Name Prefix:	✓ ing size: 1000	Kbytes (1000~20 Kbytes (200~5000)	00000000]				
	Submit Don't Submit							

- Enter the Recording entry name. Check the "Enable this recording" box to activate this function. Enable this option if you want to upload the recording to a shared folder on the network. Then set the Priority and the Source from the drop-down list.
- 2. Set the recording schedule time. Select the day(s) for recording to be enabled
- 3. Select Always or From.

"Always": This enables the DDK-1700D to make video clips continuously.

"From": The time range specified for the video clip.

4. Click "Submit" to save or click "Don't Submit" to go back to the Event main page.

Record settings:

- (1) Click Add in the Record area on the Event Settings page to open the Record settings page. In this page recording source, recording schedule and recording capacity can be defined. A total of 2 recording settings can be configured.
- (2) Enter the Record entry name for the event setting.
- (3) Select "Enable this recording" option to enable the recording setting.
- (4) Select the recording priority from: "normal", "high" and "highest". Recording with a higher priority will be executed first.
- (5) Select the recording source from the drop-down list (profiles).
- (6) Specify the recording schedule and the recording settings.

Recording Schedule:

- (a) Select the days of the week.
- (b) Set the recording schedule in the 24-hour time format.

Recording Settings:

- (a) Destination: You can select the SD card or SAMBA (Network storage).
- (b) Total cycling recording size: When the maximum capacity setting the oldest files will be overwritten by the newest.
- (c) Size of each file for recording: Set the maximum file size for each video files.
- (d) File Name Prefix: Enter the text that will be appended to the front of the file name.
- (7) Click Submit to enable the settings and exit the page. The new media settings will appear on the Event Settings page.

4.1.3.6 Changing the Storage Settings

• Changing the SD card Settings.

1. Click the "storage" button at the top of the Setup page to enter the "SD Card" screen.

ipx	DDK-1700			DDK-1700 Live Video Setup Wizard		
Image	Network System		Application	Storage	Status	
SD Card	SD CARD					
Logout	SD CARD					
	Records					
	Record T	/pe	Num of files		Size	
	Video		0		096	
	Picture		D	4096		
	sd form	at	Total:7962400KB, Used:12KB, Free:7962388KB			

- 2. The SD Card page contains two image modes, Video and Picture.
- 3. Click "Video" or "Picture" to enter the sub year-month folder.
- 4. Click to enter sub date folder.
- 5. Click the file to display images.
- 6. Files can be deleted by checking and then clicking the OK button.

4.1.3.7 Status

<u>Device information.</u>

This page displays information about device and network connection.

Click the "Device info" button on the Status page to enter the "Device info" screen.

ipx	DDK-1700D			Live Video S	etup Wizard Help
Image	Network	System	Application	Storage	Status
Device Info	DEVICE INFO				
Logout	INFORMATION Model Name Device Name Time & Date Firmware Version HTML Version Activex Version MAC Address IP Address IP Subnet Mask Default Gateway Primary DNS PPPoE DDNS TV Output Mode	DDK-1700D DDK-1700D Mon May 23 00:15 2.00 3.0.78 2.00,48 00:0C:0C:01:FE:D 192,168.0.176 255:255.252.0 0.0.0 192.168.1.11 Disable Disable NTSC			

• <u>Device information.</u>

This page displays the DDK-1700D log information.

ipx		DDK-1700		Live Video Se	etup Wizard Help
Image	Network	System	Application	Storage	Status
Device Info	SYSTEM LOG	3			
Log	CURRENT LOG	M.			
Logout	2. 22-05-2011 23:00 3. 22-05-2011 23:00 4. 22-05-2011 23:00 5. 22-05-2011 22:55 6. 22-05-2011 22:55 6. 22-05-2011 22:56 9. 22-05-2011 22:57 10. 22-05-2011 22:57 11. 22-05-2011 22:47 13. 22-05-2011 22:47 14. 22-05-2011 22:47 15. 22-05-2011 22:47 16. 22-05-2011 22:47 17. 22-05-2011 22:47 18. 22-05-2011 22:47 18. 22-05-2011 22:47 19. 22-	33 IP CAMERA AC 36 SYSTEM SET II 32 SYSTEM SET II 31 IP CAMERA AC 31 IP CAMERA AC 31 IP CAMERA AC 354 SYSTEM SET II 50 SYSTEM BOOT 32 SYSTEM BOOT 31 35 SYSTEM BOOT 31 35 SYSTEM SET 464 SYSTEM SET 464 SYSTEM SET 464 SYSTEM SET 464 SYSTEM SET 4231 POT LOGIN OK 4231 SYSTEM SET 4231 SYSTEM 4231 SYSTEM SET 4231 SYSTEM 424 44	ING QUIRE DHCP IP 192 R LIGHT OFF ING R LIGHT OFF ING IR LIGHT OFF TING IR LIGHT OFF TING FROM 192.168.0.28 FROM 192.168.0.28 FROM 192.168.0.78 FROM 192.168.0.78	.168.0.176 .168.0.176 2.168.0.176	

- 1. Click the "Device info" button on the Status page to enter the "Device info" screen.
- 2. Click "Clear " to erase all system logs. You may also download by clicking "Download".

Using PPPoE

- 1. Install the XDSL software (obtained from your ISP dealer) on a PC.
- Search DDK-1700D's IP address: you can connect the DDK-1700D to a Video monitor. The monitor screen will show the IP address on the right side.
- 3. Turn off the DHCP function of the DDK-1700D if it is "ON".
- 4. Installing an IP address in your PC or notebook.

Desktop \rightarrow Move the mouse to the Network neighborhood and click the right key of the mouse \rightarrow Choose properties \rightarrow Choose your local connection \rightarrow Choose the properties and select the configuration \rightarrow Select the TCP / IP \rightarrow Choose the properties \rightarrow Enter the IP address in a quad formula, for example "192. 168. 1.101" (the first three parts must be identical to the above example. The last part can be changed to any number not to exceed 255) \rightarrow Click on the mask and the mask input: "255. 255. 255. 0" (a fixed formula) \rightarrow Click "OK" \rightarrow Click "OK".

 Desktop → open browser → Enter the DDK-1700D's IP address in the URL→ Enter →DDK-1700D will load.

PPPoE Settings

- Launch DDK-1700D's home page → Choose network → Enter User Name: "root" and Password: Admin" → Click "OK'.
- Choose PPPoE → PPPoE mode: Select "ON" → Enter "Account" → Enter "Password" → Submit → Unplug the power connection.
- Power up the DDK-1700D to receive an IP address from the ISP (this IP address is dynamic
 Each time the DDK-1700D is powered off and on a new IP address will be obtained).

Test:

1. Desktop → IE browser → Enter the DDK-1700D IP address (as in the PPPoE settings in

step 3 above) \rightarrow DDK-1700D should load.

DDNS settings

- 1. Launch browser \rightarrow Enter address to connect to DDK-1700D \rightarrow Choose network \rightarrow Enter User name : "root" and Password : "Admin" \rightarrow Click "OK" .
- Select "DDNS" → Click "Enable DDNS" → Enter the "DDNS host name", for example "abc123. homeip.net" → Enter "DDNS Account", for example "abc123" → Enter the "DNS Password", for example "7777" → Submit → The settings are now complete → Close browser.
- Re-open browser → Enter address, → view DDK-1700D images. The procedure is complete.
- NOTE: These settings are only for an ADSL Dynamic IP configuration. If your configuration is fixed, it is not required to set the PPPoE and DDNS settings.

4.2 The CMS (Central Management System)

This section provides instructions for installing and using the Central Management System

(CMS) software which can be found on the CD included with the DDK-1700D.

System Requirements

- Intel Pentium 1.5 GHz processor or above (2.8 GHz or higher recommended).
- · 1GB RAM minimum (2GB or higher recommended).
- · Windows XP or above.
- 16 MB VGA card capable of 24-bit true color display.
- 10GB free hard-disk space for software installation.
- 10/100 Base-TX network for LAN operation.
- Microsoft Internet Explorer 6 (or higher recommended).
- In multi-channel recording mode, HD data transfer rates must be 66MB or above (100MB or higher recommended).

4.2.1 Introduction

The CMS allows access to multiple DDK-1700Ds from a local or remote desktop or a laptop

in a TCP/IP network environment and supports the following functions.

- Views live steaming images from DDK-1700Ds.
- Store, search, and review recorded video..
- Supports manual, event, and scheduled recording.

4.2.2 Installing CMS on your Computer

Installing CMS from the supplied CD.

- 1. Exit all applications running on the computer.
- 2. Insert CD in CD-ROM drive. The program will execute the installation automatically. Follow the on-screen instructions to proceed with the rest of the installation procedure.
- After the installation is complete, launch START and point to Programs / CCTV CMS / CCTV CMS to open up the program selection page as shown below. Click on the CCTV CMS tag to start the CMS program.

Installing CMS from the ZIP file.

- 1. Save the ZIP file to your computer and extract the file to a designated directory.
- 2. Open the extracted folder. The folder contains 1 file.
- Click the setup icon to execute the installation and then follow the on-screen instructions to proceed with the installation process.
- After the installation is complete, click the START menu from your computer, and point to Programs / CCTV CMS to start the CMS program.
- NOTE: Please make sure the TCP/IP communication software has been properly set and configured in your computer.

4.2.3 Login


Once the **CMS** is executed a Login prompt will appear. Enter the default user name: **admin**, and password: **9999** in the respective. Click the "**OK**" button and enter the console page of the **CMS**.



Viewing DDK-live video

Follow the instructions below to use the CMS-1020 to locate DDK-1700Ds accessible on

the network. Upon launching CMS a connection box will appear as shown below.

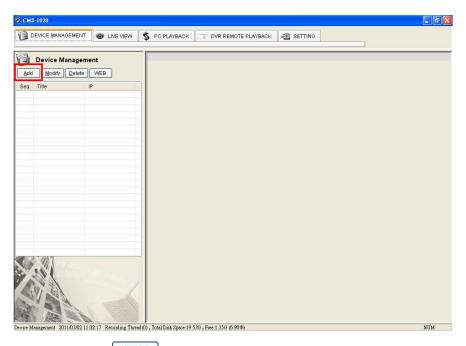

1. Select the (Add Device) button on the **Device Management** page.

2. Add a device from the Add Device page.

Auto Scar		
IP:		
HTTP Port:		
Device Name	ə:	
User Name:		
Password:	1	

 (1) Click the Auto Scan button at the bottom of the "Add Device" page to find devices accessible on the LAN. The "Device Auto Scan" page will appear. Select a device and click "Add" at the bottom of the page to access the "Add Device" page again.

(2) This page shows the device IP Address and the HTTP Port. Enter Device Title, Username, Password, and select the share device function or the permissions function. Click the "Add " button to establish the connection between the device and the computer.

 Click the device title to begin viewing live video from a DDK-1700D from the device list.

NOTE: To add more devices repeat the above instructions.


4.2.4 Operation

4.2.4.1 Device Management

Once the connection has been established, click the DEVICE MANAGEMENT

button to enter the

Device Management window (see the sample screen below.) On the left side of the window is video from selected device.

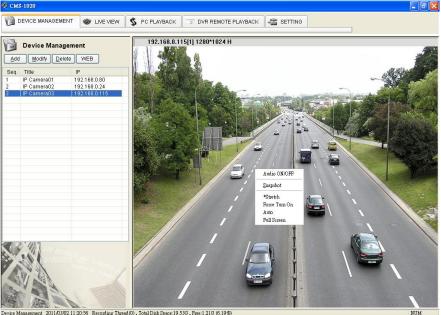

Device Management 2011/03/02 11:20:56 Recording Thread (0), Total Disk Space:19.53G, Free:1.21G (6.19%)

ADD	Add device: Add a new device.				
	Modify device: Modify the added device. Select a device, then click this button to edit the device.				
DEL	Delete device: Delete the added device.				
WEB	Device Setting: For additional device settings, select the device title and click the SETTING button to enter the settings pages of the device.				
List of devices:					
	the title of the device and use the icons above the list to change the device				


Display area:

Click the title of the device to see a live images in this area.

Pop-menu: Use the mouse to move to each channel. Click the right key of the mouse to show a window. You can select "Audio On/Off", "Snapshot" or "Size".			
Audio On/Off	Click to activate the audio function. Click again to deactivate the function.		
Snapshot	Click to save a JPG image form the selected device. Set the backup file path and the file name.		
Size	Stretch: Click "Stretch" and the image will be stretched to fit the entire viewable area. Force Turn On: Click "Force Turn On" and the image will be shown in the DDK-1700D's original image ratio centered in the display area. Auto: Click "Auto", and the image will be stretched to fit the entire viewable area of the viewer in DDK-1700Ds normal ratio. Full Screen: Click "Full Screen" and the image will be stretched to the displays full screen area.		

4.2.4.2 Live View

W LIVE VIEW Once a connection has been established, click the button to enter the Live View window (see the sample screen below.)

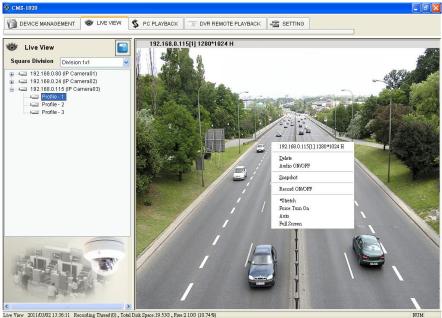

Live View 2011/03/02 13:36:11 Recording Thread (0), Total Disk Space:19:53G, Free:2.10G (10:74%)

Division	Select the division mode of the live view area.			
	Click to display information for the selected device above the live view display area.			
Live view area	Select a device from the list and drag and drop it in the live view area.			
Pop-menu: Use the mouse to move Select "Audio On/Off",	e to each channel. Click the right mouse button to show a window. "Snapshot" or "Size".			
Remove	Click the "Delete" item in the pop-up menu and the image will be removed.			
Audio On/Off	Click to activate the audio function. Click again to deactivate the function.			
Snapshot	Click to save a JPG and set the backup file path and file name.			
Record On/Off	Click to record video.			

Size	Stretch: Click "Stretch" and the image will be stretched to fit the entire viewable area. Force Turn On: Click "Force Turn On" and the image will be shown in the DDK-1700D's original image ratio centered in the display area. Auto: Click "Auto" and the image will be stretched to fit the entire viewable area of the viewer in DDK-1700Ds normal ratio. Full Screen: Click "Full Screen" and the image will be stretched to
	Full Screen: Click "Full Screen" and the image will be stretched to the displays full screen area.

Add a DDK-1700D to Live View area:


- 1. Click the DDK-1700D.
- Hold down the right mouse button and drag onto the Live View area. The video from the DDK-1700D will be displayed.
- In the Live View area, to change/remove DDK-1700Ds or use the "Audio On/Off" or "Snapshot" functions, right click again on the live view area, then click left to select.

Remove a DDK-1700D from the Live View area:

- 1. Select the DDK-1700D to be deleted.
- 2. Right click on the live view area, then click left to select "Delete".

4.2.4.3 Playback

Click the S PC PLAYBACK button to enter the PC Playback page.

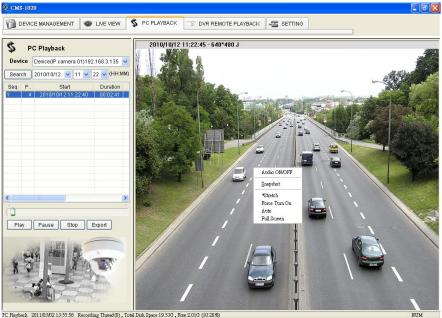

PC Playback 2011/03/02 13:55:56 Recording Thread(0), Total Disk Space:19.536, Free:2.016 (10.28%)

Device List	Select the device from which to play back recorded video.				
Play List Click the file name from the recording list and the program will play b file and show the details of the recorded file.					
Scrollbar	Drag the Scrollbar with the mouse to move to a desired location.				
PLAY	Click to play the selected video file.				
PAUSE	Click to pause.				
STOP	Click to stop.				
Export	 Click to save an AVI file of the selected video. Use the slider to set the Start/ End time of the recorded file then click the "Set" button. Set the backup file path and the file name by clicking the "AVI" button. Click to stop exporting. Then click "Save". 				
Pop-menu: Use the mouse to move to each DDK-1700D. Click the right key of mouse to display a wind Select "Audio On/Off", "Snapshot" or "Size".					
Audio On/Off Click to activate the audio function. Click again to deactivate the function					

Snapshot	Click to save a JPG image of the selected channel. Set the file path and the file name
Snapshot Size	file name. Stretch: Click "Stretch" and the image will be stretched to fit the Entire viewable area. Force Turn On: Click "Force Turn On", and the image will be centered and shown in the DDK-1700D's original image ratio. Auto: Click "Auto", and the image will be stretched to fit the entire viewable area of the viewer in ratio. Full Screen: Click "Full Screen", and the image will be stretched to the
	entire monitor display area.

4.2.4.4 Remote Playback

Press the	R REMOTE PLAYB	button to enter the	DVR Remote Playback page.	
CMS-1020				- 6 🛛
	W LIVE VIEW	S PC PLAYBACK	WBACK SETTING	
DVR Remote Pla	yback 🔷	2010-09-07 10:41:09	2010-09-07 10:41:08	
2 4Ch DVR 19 RECORD ALARM 09 2011 Sun Mon Tue Wed Th 5 6 7 8 9 1 2 13 14 15 1	221580.47 321580.113 1 Q SEARCH 0 V SEARCH 1 SEARCH 2 3 4 9 10 11 6 17 18			
26 27 28 29 3 No. Time 00001 10.07.43 Page 1 SP SP BACK PLAY STOP	23 24 25 0 Duration 0001:21 PAUSE FORW >	2010-09-07 10:41:09		
DVR Playback				NUM

List Clicl				-	devi	ce a	nd us	e th	ie b	uttoi	ns b	elov	v the	list to search for recorded video.
69 Sun	RECOF		Ved	010	-	∨ Sat			£	REG	CORI	D		Click this button and the Record List panel will appear on the left side of the Live View page.
5 12 19 26	6 13 20 27	7 14 21 28	1 8	2 9 16 23 30	Fri 3 10 17 24	4 11 18 25	09 Sun 1 5 12 19 26	6	Tue 7 14 21 28	Wed 1 8	2010 2 9 16 23 30	Fri 3 10 17 24	Sat 4 11 18 25	Search for recorded video by Month/Date/Year
No.		Time 10.07			iration 01:21		No.		Time 10.07 4			uration :01:21		NO.: File number in the alarm list. Time: Starting time. Duration: Length of recording.
	Page 1 🛛 🖌			Page up/ Page down							Enables page scrolling			
BACK			BACK (REV)							Click to play a recorded video in reverse.				
PLAY			PLAY							Click to play a video clip from the PLAY LIST.				


STOP	STOP	Click to stop playing a recorded clip.
PAUSE	PAUSE	Press the PAUSE button to pause video.
FORW	FWD	Click to play a recorded video in fast forward mode.
🔷 ALARM	NALARM	Click this button and the Alarm control panel will appear on the left side of the Live View page.
UB v 2010 v Sun Mon Tue Wed Thu Fri Sat 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 9 20 21 22 23 24 25 26 27 28 29 30 31	OB 2010 Image: state	Allows search for video by Month/Date/Year. Dates marked in blue indicate there are alarm activated video clips on those days.
No. Time Ch Type 00001 10:21:20 01 Motion 00002 10:22:39 01 Motion 00003 10:23:39 01 Motion 00004 10:28:20 01 Motion 00005 10:35:38 01 Motion 00006 10:35:32 01 Motion 00007 10:40:07 01 Motion 00000 10:40:07 01 Motion	No. Time Ch Type 00001 10:21:20 01 Motion 00002 10:22:29 01 Motion 00004 10:23:39 01 Motion 00004 10:28:20 01 Motion 00005 10:35:38 01 Motion 00006 10:35:32 01 Motion 00006 10:35:32 01 Motion 00006 10:40:07 01 Motion 00000 10:40:07 01 Motion	 NO.: An alarm number in the alarm list. Time: The time the alarm occurred. Ch: The channel where an alarm occurred. Type: The alarm type. Click on entry to review a recorded video clip.
Q SEARCH	Q SEARCH	Click this button and the Time Search panel will appear on the left side of the Live View page.
09 2010 Sun Mon Tue Wed Thu Fri Sat 1 2 3 4 5 6 7 8 9 10 11 1 2 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 4 16 17 18	OD 2010 V Sun Mon Tue Wed Thu Fri Sat 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31	Allows search by Month/Date/Year. Enter the hour and minutes and
0 V (HH:MM) Search	0 🗸 0 🗸 (HH:MM) Search	click the Search button.

4.2.4.5 Settings

Cick the SETTING tab to enter the Settings page.

(1) Custom

Select Custom to enter the settings page.

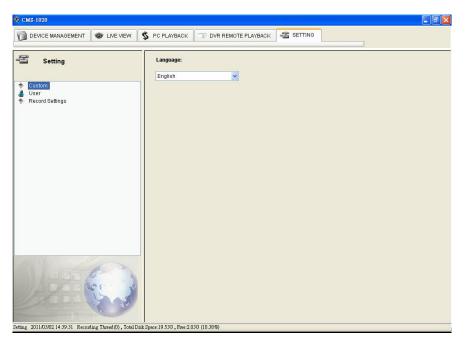

Select a language from the drop-down list.

(2) User

Select User to enter the setting page.

CMS-1020	S PC PLAYBACK TO DVR REMOTE PLAYBACK	
🚰 Setting	User List:	
 Custom User Record Settings 	admin	
etting 2011/03/02 14:44:48 Recording Turesd(0), Total D		NUM

Add User:

- 1. Click the "Add" button to bring up the Add User dialog.
- 2. Enter the Username and Password and Confirm Password.
- 3. Select the user's group.
- 4. Click "Add".

Modify User:

- 1. Click the "Modify" button to bring up the Modify User dialog box.
- 2. Enter Password and Confirm Password.
- 3. Select the user's group.
- 4. Click "Modify".

Delete User:

- 1. Select the user to be deleted.
- 2. Select "Delete" and then click "Yes".

(3) Record Settings

Select Record Setup to enter the setting page.

CMS-1020	
DEVICE MANAGEMENT	S PC PLAYBACK 🖅 DVR REMOTE PLAYBACK 🦉 SETTING
Custom User Record Setting Record Settings	Record Path C/CMSRec Record Path Schedule Image: Comparison of the second path Image: Comparison of the second path Derice Image: Comparison of the second path Image: Comparison of the second path Derice Image: Comparison of the second path Image: Comparison of the second path Derice Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Comparison of the second path Image: Compare: Comparison of the second path Ima
ting 2011/03/02 14:55:48 Recording Thread(0), Total Dis	Space:19.53G, Free:2.03G (10.37%) NUM

Record Path	Click Record Path to select the storage path for recorded files.
Record Schedule	 Set the record schedule: (1) Select the device from the drop-down list. (2) Select the Profile ID (DDK-1700D) or the Channel (DVR) to be connected. (3) Click • + to reduce or enlarge the schedule. (4) Each grid on the schedule represents 15 minutes. A gray grid indicates the first 15 minutes of each hour. (5) Use the left mouse key to set the schedule. (6) Use the right mouse key to cancel the schedule. (7) Press Save to save the schedule.

5. ADVANCED OPERATION

Question 1:

How do I view live images of the DDK-1700D via Internet Explorer on a Desktop PC or a

laptop computer in a situation where there are no monitors?

⟨To obtain the IP address of the DDK-1700D without a monitor, use one of the following two

UPnP: Please refer to **APPENDIX 1**.

IP function: Please refer to 2.6 The USB function.

Question 2:

How do I activate UPnP?

1. Follow the default settings to set up the related settings and connect hardware.

- 2. Activate the Web browser and enter the DDK-1700D's URL.
- 3. SETUP→Network button.
- 4. Select "Enable UPnP presentation".
- 5. Select "Enable UPnP port forwarding"; make the "Forwarding Port" setting.

NOTE:

- 1. Follow step 4 above then turn on computer's "My Web Neighbors" to find the DDK-1700D. Then click to go to the DDK-1700D's home page.
- 2. Follow step 5 above and make the Route UPnP port forwarding setting.

3. Your computer can access a DDK-1700D through a router by opening a port on the router (port forwarding) if the router is configured to a specific port. For example port "8080", you can enter the IP address as <u>http://xxx.xxx.xxx.8080</u> on the URL entry box of the web browser to access the DDK-1700D.

Question 3:

How do I change Video Profiles 1, 2, 3?
1. On Live page click Profiles 1, 2 & 3.

Question 4:

How do I set up the motion detection area and its sensitivity?	
now do i set up the motion detection area and its sensitivity?	
*	

- 2. Go to SETUP \rightarrow Application button \rightarrow Motion Detection button.
- 3. Select "Enable Video Motion".
- 4. Set up the target zone and setup the Sensitivity and Percentage.
- 5. Click the Submit button to submit the setting.
- 6. When a person or object moves within the target zone under a setting, the Motion Detection will display the response signal in the Live Video and Video Out.

Question 5:

How do I use the DynDNS to connect the DDK-1700D by using its Sub Hostname via the

intranet?

Set the DDNS function

- 1. Click on the Network button on the home page.
- 2. Click on the **Dynamic DNS** button on the left side of the page to enter the "Dynamic DNS" page.
- 3. Click "Enable DDNS" to activate.
- Enter the DDNS Host Name, DDNS Account and DDNS Password which you created in the <u>www.dyndns.com</u> website.
- Click on the Submit button to submit the setting.
 NOTE: Please refer to the APPENDIX 2 for more details.

Set the PPPoE function

- 1. Click the Network button on the home page.
- 2. Click the **PPPoE** button on the left side of the page to enter the "PPPoE" page.
- 3. Choose "Enable" to activate the function.
- 4. Enter the Account and the Password which are provided by your ISP.
- 5. Click the **Submit** button to submit the setting.

NOTE: Please refer to section 4.1.3.8 for more details.

• Use the Sub Hostname to view the DDK-1700D

- 1. Click on the URL block at the top of the PC screen.
- Enter the DDNS Host Name of the DDK-1700D into the URL block and press the "Enter" key to enter the login page.
- 3. Enter the user name and password.
- 4. Click the "**OK**" button and enter the home page of the DDK-1700D.

Question 6:

How do I add or modify users and their authority to use the DDK-1700D?

Centering the setting page

- 1. Click the System button on the Setup page.
- 2. Click the User button on the left side of the page to enter the "USER" page.

Add a new user

1. Enter the user name, the password, the confirmed password and choose the authority level.

There are three levels of authority: Admin, Operator and Viewer.

Admin: The user who accesses with the admin name and password has the full rights to

change the settings of the DDK-1700D.

Operator: Has access to viewing and functionality.

Viewer: Has limited viewing rights.

2. Click the Add/Modify User button to submit new user setting.

Modify the user

- 1. Click the user name you want to modify from the USER LIST.
- 2. Enter the password, the confirmed password and choose authority level.
- 3. Click the Add/Modify User button to submit new setting.

Oelete a user

- 1. Click the user name you want to delete from the USER LIST.
- 2. Click the **Delete User** button.

Question 7:

How do I to create the self-signed certificate manually?
*

- 3. Go to Setup→Network button →HTTPS button
- 4. Select "Enable secure HTTPS connection".
- 5. Create certificate settings → Create self-signed certificate manually → Create.
- 6. Fill in the relevant data in the text boxes titled Country, State or province, Locality, Organization, Organization Unit, Common Name & Validity; click "Create".

Question 8:

· · · · · · · · · · · · · · · · · · ·	. – . – . 、
How do I download the log list?	i

- 1. Click Set up \rightarrow Status \rightarrow Log.
- 2. The display will show the log list page.
- 3. Click First Page, Previous 20 or Next 20 to view the recording list.
- 4. Click Download; select the file path, and download the recording list.

6. SPECIFICATIONS

	Image sensor	1/2.7" 2M CMOS sensor			
	Lens	2.9~8.2mm C/CS MOUNT/3.3~12mm vari-focal board type			
DDK-1700D	Minimum illumination	Color: 0.2 Lux @ F1.4.; B/W: 0.02 lux@F1.4			
	IR cut filer	Yes			
	Day & Night	Auto / Day / Night / Schedule.			
	Video Compression	H.264 / MPEG4 / MJPEG.			
	Resolution	-1080P (1920 x 1080), 720P (1280x720), -VGA (640x480), QVGA (320x240), QQVGA (160x120)			
	Video streaming	 Simultaneous H.264, MPEG4 and MJPEG. Multi-profile: resolution / compression / frame rate / video quality. 			
	Profiles	3			
Image	Frame rate	Single profile (1920x1080): 30FPS Multi-profile (1920x1080): 20FPS			
	Image settings	 Adjustable image size, quality, and bit rate. Day / Night mode. Flip & Mirror. AGC, AWB, AES. Time stamp and text caption overlay. Privacy masks. 			
	Video management software	SDK, including HTTP-API / ActiveX / ONVIF.			
	Audio streaming	Тwo-way.			
Audio	Compression	G.711u / G.726.			
Audio	Audio bit rate	G.711u 64kbps / G.726 32kbps.			
	Inputs / outputs:	1 x input / 1 x output (3.5mm earphone jack).			
	Security	Multi-level password protections, IP address filtering, HTTPS encryption, User access log.			
Network	Protocols	IPv4, HTTPS, HTTP, TCP, UDP, RTP/RTCP/RTSP, DHCP, NTP, FTP, SMTP, UPnP, ICMP, ARP, DDNS, PPPoE, SAMBA			
	Users	Access by 8 simultaneous users.			
	Firmware update	SD card / HTTP.			
	Recording	SD card, SAMBA, FTP			
	Pre-alarm recording	Yes.			
	Advanced motion	512 zones. Sensitivity: 0 - 100 %.			
Alarm	Trigger	Motion Detection Schedule Alarm input Ethernet loss			
	Notification	Network/Remote digital alarm input SD card recording, SMTP, FTP, HTTP, alarm output.			
	nouncation				

	RJ-45	10 BASE - T / 100 BASE -TX.
	Digital I / O	Push-in: 2 x digital input / 2 x digital output / 1 X DC output (12V DC) / 1 x ground
Connectors	Earphone jack	2 x 3.5 mm (1 x Audio in [mic. in / line in], 1 x Audio out [line output]).
	Iris	DC IRIS.
	Reset	Reset for factory default.
	Local storage device	SD / SDHC card slot.
	LED indicators	Power / Network / SD card.
	Power consumption	≦ 10W
	Power	 12V DC (DC power jack). 24V AC (2 pin terminal block). 802.3af compliant Power over Ethernet (IEEE 802.3af. Class 3).
	Processors	TMS320DM368.
	OS	Linux 2.6 kernel.
General	Operating Temperature	-40°C to 50°C (-40°F to 122°F).
	Approval	CE, FCC, RoHS.
	Dimensions / Package Weights	124 x 150 mm. (H x W) / 2.25 kg
	Accessories included	 Installation Guide. CD x 1 (Includes User's Manual). Power adapter: (Input: 100-240 VAC, 50 / 60 Hz, Output: 12VDC, 1A). RJ-45 cable x 1

* Design and specifications are subject to change without notice.

7. Client System Requirements

System requirement	Windows XP or higher
Browser	IE 6.x
Live Monitor	Max. 16 Split, Real Time REC/ Capture/ Audio/ Live Event/ Full Screen
Playback Viewer	Playback, Time / live event Search / Export (JPEG / AVI)
Settings	Device/ System/ DDK-1700D management/ web page
Client PCs	One DDK-1700D can supports 8 simultaneous client PCs.

APPENDIX 1. – How to run DDK-1700D UPnP

The DDK-1700D supports the UPnP (Universal Plug and Play) protocol which makes it easier for set-up. Follow these steps for UPnP use:


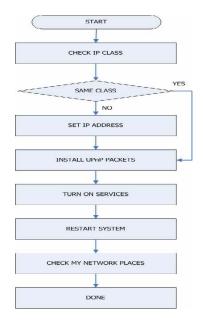


Figure 1 UPnP Setup Flow Chart

1. Check the IP class of your PC


In most case Microsoft Windows[®] will assign an IP address of 169.254.*.* automatically with a subnet mask of 255.255.0.0 if the DHCP server is absent. The default IP address of a DDK-1700D[®] is 192.168.1.168 with a subnet mask of 255.255.255.0. There won't be any communication due to different IP class domains and you have to modify the relative settings or the UPnP protocol won't work. It may be necessary to check you IP address. Follow this procedure:

Step 1: From the Start menu, point to Settings, and then click Control Panel. See Figure 2.




Step 2: When Control Panel appears, double-click the Network Connections icon. The

Network Connections dialog box appears. See Figure 3.

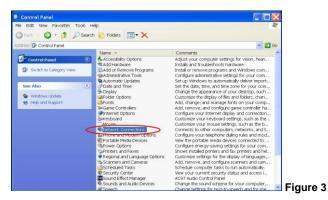

Step 3: Click the Protocols tab in the Network Connections dialog box. See Figure 4.

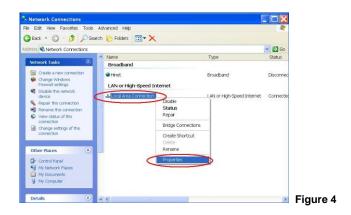

Step 4: When the Local Area Connection Properties dialog box comes up, choose Internet

Protocol (TCP/IP) and click Properties. See Figure 5.

enera	d Authenticatio	on Adve	inced					-	
Conne	ectusing:								
milla	Marvell Yuko	Gigabit	Ethemet *	10/100/1		Configu	ine		
This c	connection use:	the follo	wing item	s:					
	Client for Mic								
	File and Prin			osoft Ne	atworks				
100 °G	internet Proto	icon (TCF	200.3	-					
							_		
	Install		Uninste	di C		Properti	es	\mathbf{D}	
Des	cription						-	5	
	ansmission Co						vide		
	ea network prot verse interconn			commur	lication	across			
	iow icon in notifi	cation at		opperte	er.			1 I	
	stify me when th					nectivity			
termine and the second									

Step 5: In the Internet Protocol (TCP/IP) Properties dialog box, choose Use the following IP


Address to indicate that you do not wish to use DHCP, and assign IP Address

192.168.1.200 with Subnet mask 255.255.255.0.

Click **OK** when finished. See Figure 6.

can get IP settings assigned a ability. Otherwise, you need to					
opriate IP settings.					
) Obtain an IP address automa					
Use the following IP address				-	
oddress:	192	168 .	1 . 200		
ubnet mask:	255	255 . 2	55 . 0	\triangleright	
efault gateway:					
Obtain DNS server address a	automatically				
Use the following DNS server	addresses:				
referred DNS server:					
ltemate DNS server:					
				/anced	_

Step 6: Choose Close to finish the modification. See Figure 7.

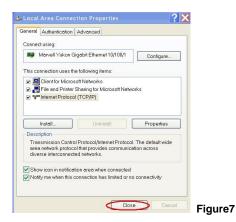

2. Install UPnP Packets

Follow these steps:

Step1: In the Start menu, point to Set Program Access and Default and click. See Figure 8



Step 2: When the Add or Remove Programs dialog box appears, click Add/Remove

Windows Components button. See Figure 9.

🐻 Add or Rem	nove Programs		
Change or Remove Programs Add New	And a program from cc2+BCM or floppy dat. To akil approgram is from a CD-BCM or floppy dat, club. CD or Ploppy Add programs from Morosoft Constrainer Windows Relative, device drivers, and system updates over the Internet, club. We Unset (strainer)	CD or Bog	late
Programs Add/sensore Windows Windows Windows Set Program Access and Detaults	Add programs from your network: Ealingcry: Bis programs are available on the network	All Catogonics	M
			Figure

Step 3: Check the Network Services in the Windows Component Wizard dialog box, and

then click **Details...** See Figure10.


dows Components You can add or remove compone	nts of Windows XP.		
To add or remove a component the component will be installed.			of
Components:			
🗆 🚅 Message Queuing		0.0 MB	^
MSN Explorer		20.7 MB 0.3 MB	-
Networking Services	int Son icon	0.3 MB	
	III Delvices		v
Other Network File and Pr Bloutouk Express		0.0 MB	

Step 4: Check UPnP User Interface, and choose OK. See Figure 11.

	stalled. To see what's included in a compone	ent, click Details.	
-	Networking Services: vay Device Discovery and Control Client	0.0 MB	~
BPeer-to-Peer		0.0 MB	
RIP Listener		0.0 MB	
Simple TCP/	PServices	0.0 MB	
🛛 💂 UPnP User In		0.2 MB	~
	plays icons in My Network Places for UPnP de vork. Also, opens the required Windows Firew		
	puired: 56.3 MB	Details	
otal disk space red			

Step 5: When the original Network Component Wizard dialog box returns, click Next. See

Figure12.

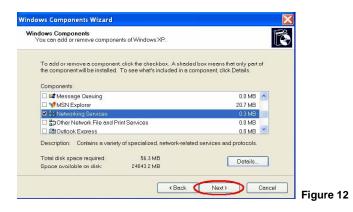


Step 6: After about one minute the UPnP installation will be finished. Click finish. See Figure 13.



3. Turn on Services


After installation services must be tuned on to start UPnP protocol. Follow these procedures:

Step 1: In the Start menu, point to Settings, and then click Control Panel. See Figure 14.

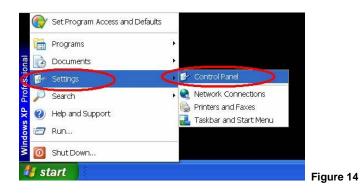


Step 2: When Control Panel appears, double-click the Administrative Tools icon. The

Administrative Tools dialog box appears. See Figure 15.

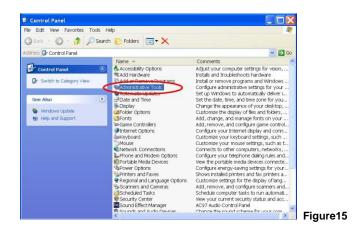


Step 3: Click the Services icon in the Administrative Tools dialog box. See Figure 16.

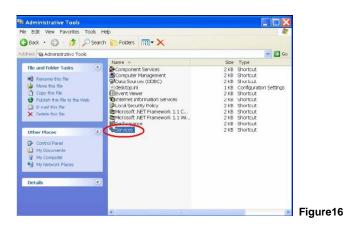

Step 4: When the Services dialog box comes up, double click the SSDP Discovery Service


icon. See Figure17.

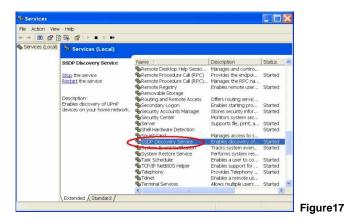

Step 5: Choose Automatic in the Startup type and click OK to start it. See Figure 18.

	n Recovery Dependencies
Service name	SEPSEV
Display name	SSDP Discovery Service
Description.	Enables discovery of UPnP devices on your home
Path to oxocu C.\WINDOWS	ablu. /System32\svchust.exe -k.LucalService
Startup typo:	Automatic
Service statu	Automatic Monuni Lits abled : Statred
Start	Stop Pause Resume
	ify the start parometers that apply wher you start the service from

Step 6: When the Services dialog box appears again, double click the Universal Plug and Play Device Host icon. See Figure 19.

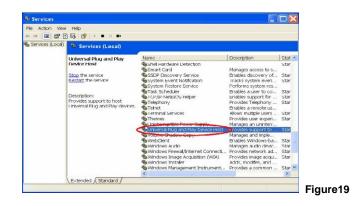

Step 7: Choose Automatic in the Startup type, click the Start button, and click OK. See

Figure20.


	Recovery Dependencies
rvice name:	upnphost
splay name:	Universal Plug and Play Device Host
escription:	Provides support to nost Universal Plug and Play devices.
ath to executabl	e:
XWINDOWS(S)	/stem32\svchost.exe -k _ocalService
Startup type.	Automatic
	Disabled
Service status:	Stopped
Start	Stop Pause Resume


Step 8: Restart your system.

4. Scan DDK-1700Ds[®] through My Network Place

After you complete the installation and have started services, the UPnP protocol will take effect.

You can scan all DDK-1700Ds in My Network Place, as in Figure21 and Figure22 below.

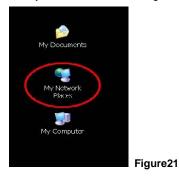

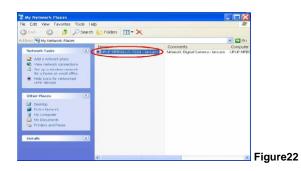

Double click the **UPnP DDK-1700D** icon, and the video live stream will pop up automatically without assigning any IP address in Microsoft Internet Explorer $\stackrel{\circledast}{.}$

APPENDIX 2. – Register as a DDNS member

This chapter provides the user with the basic instructions on how to register a free DDNS service.

Registering for a DDNS

Enter the URL <u>www.dyndns.com</u>. In the upper right-hand corner of the main page, where there is an item, "<u>Create Account</u>", as shown in Figure 1.



Create an account

Figure 1

After clicking "Create Account", you will enter the Create Account page. Please complete the form at the bottom of the page to create your account. You will receive an e-mail containing instructions to activate your account. If you do not follow the directions within 48 hours, you will need to recreate your account.

Set up the DDNS

After creating the account successfully, please enter your user name and password in the upper right-hand corner of the main page to login, as shown in Figure 2.

After you login successfully, a text will appear saying "<u>My Services</u>", as shown in Figure 3.



Figure 2



Figure 3

Click "My Services" to enter the service page. Please click the "Add Host Service" item which is below the "My Hosts" item, as shown in Figure 4. Click "Add Host Service", and its service items will appear. The <u>Add Dynamic DNS Host</u>

Click "Add Host Service", and its service items will appear. The <u>Add Dynamic DNS Host</u> item helps to add a new DDNS. Each member may have only one free account, and one free account can have only five DDNS.

Click Add Dynamic DNS Host to enter the DDNS setting page as shown in Figure 5.

https://ww	ww.dyndns.com/account/				Go Links **
nDNS				DynDilS.com Dynect	
	🔿 Dyn	DNS		Logged In Usen abolevice <u>Mir Services</u> - <u>Mir Cet</u> - <u>Log Out</u>	
		About Services	Account Support M	Vews	
	My Account	Account Summary f	or abcdevice		
	My Services				
	Account Settings	My Services	Billing	Account Settings	
	Billing	View, modify, purchase, and delete your services.	Update your billing	Update your e-mail address, set preferences, and delete your	
	My Cart	-	purchase, and view involces.	account.	
	0.Rema	My Zones	View Shopping Cart	Change E-mail Address	
	Search	Add Zone Services	Active Services	Change Password	
		My Hosts	Order History	Change Usemanie	
	Search	Add Host Services	Biling Profile and Vouchers	Contact Manager	
		Account Ocigrades	Benew Services	Maling Lists	
		MaiHop Outbound	Auto Renew Settings	Move Services	
		Network Monitoring	Sync Expirations	Preferences	
		SSL Certificates		Close Account	
		Recursive DNS			
		Support			
		DNS Service Level Agreement			
		Premier Support			

Figure 4

6 District Interview	w.dyndns.com/account/services/hos				× 🖻	Go Links 🎽 📆 •	
		About Service	s Account Support	News		-	
	My Account	Add New Hostname			Host Services		
	My Services						
	Account Upgrades SLA Premier Support	buying Account upgrade that make this form full-functional and will add several other features. Learn More					
	Zone Services Host Services	Hostname:	dividins.org	*			
	Mail-top Outbound Recursive DNS	Wildcard: Service Type:	 Yes, alas "*.hostname.domain" to sam Host with IP address 	ne settings.			
	Network Monitoring	WebHop Redirect					
	SSL Certificates	O Offine Hostname					
	Renew Services Auto Renew Settings Sync Expirations			0			
	Account Settings	IP Address:					
	Billing		Use auto datacted IP address 60 250.12.2.				
	My Cart		TTL vake is 60 seconds. Eds TTL				
	eters	Mail Routing:	Yes, let me configure Email routing.				
	Search		6	Create Host			
	Search						
		© 1993-2008 DV	namic Nativork Sarvices, Jr.c Legal Notices - Con	Xact		*	

Figure 5

In this page the "Hostname" is set. The user can choose a Sub Hostname from the right-hand side of the Hostname's drop-down list.

NOTE: You don't have to set the "IP Address" in the same format as the DDK-1700D's IP Address. It will renew the IP Address automatically.

After finishing this setting, click the "Create Host" button as shown in Figure 5.

15					- E - C
				DynDHS.com + Dynect +	DymTLD +
🔿 Dyr	nDNS			Logged In User: abodevice My Services - My Carl - Log Out	
	About Services	Account Su	pport News		
My Account	Host Services			Add New Hostname - Host Update Loop	
My Services		Constant and			
Account Upgrades SLA	Hostname		Details	Last Updated	
SLA Premier Support	abcdevice.dvndns.org	Host 60.250.12.2	Feb. 0	M, 2008 3:12 AM	
Zone Services					
Host Services					
MailHop Outbound					
Recursive DNS					
Network Monitoring					
SSL Certificates					
Renew Services					
Auto Renew Settings Sync Expirations					
Account Settings					
Billing					
My Cart					
C.tem					

Figure 6